



Electronics
International Inc.

CGR-30A-() and CGR-30C-()

Installation Instructions

II 10291301 - Rev. B: 5/11/15*****

**The CGR-30x is an FAA- Approved Primary Replacement
for Engine and Aircraft System Instruments**



Read this manual before installing this data recorder. It contains information that may affect your decision to install this product and/or the safety of your aircraft.

Model #: _____

Serial #: _____

Blank Page

Important Notice

******* MUST READ *******

Page 1 of 4

If you think it is not important to read this manual, you're wrong! This manual contains important operating information that may affect the safety of the pilot, passengers, aircraft, operation of the system or time to install the system. You **MUST** read the manual prior to installing this system. Any deviation from these installation instructions is the sole responsibility of the installer and should be done in accordance with AC 43.13.

Read the Warranty/Agreement. There is information in the Warranty/Agreement that may alter your decision to install this product. **If you do not accept the terms of the Warranty/Agreement, do not install this product.** This product may be returned for a refund. Contact Electronics International Inc. for details.

If you are not an FAA Certified Aircraft Mechanic familiar with the issues of installing aircraft EGT, CHT, RPM, M.P, Fuel Level, Fuel Flow, Fuel Pressure, Volt, Amp, Oil Temperature and Pressure instruments, Do Not attempt to install this instrument. The installer should use current aircraft standards and practices to install this system (refer to AC 43.13).

If the installer does not have the skills, knowledge, tools, equipment or facility, to perform and determine whether the installation of this product is safe, reliable and accurate and to determine whether this product is operating properly after installation, **DO NOT INSTALL THIS PRODUCT.** If the owner/pilot and/or installer are unwilling to take the responsibility for the installation and operation of this product, **DO NOT INSTALL THIS PRODUCT.** This product may be returned for a refund. Contact Electronics International Inc. for details.

By installing this product, the aircraft owner/pilot and installer agree to hold Electronics International Inc. harmless and in no way responsible for monetary compensation, including punitive damages for any incident, harm and/or damage associated with this product. If you do not agree to the above, **DO NOT INSTALL THIS PRODUCT.** This product may be returned for a refund. Contact Electronics International Inc. for details.

Electronics International Inc. is not liable or responsible for a pilot's action or any situation that results in personal injury, property damage, missed commitments, lack of use of an aircraft or any expenses incurred due to: product failure, inaccuracy in displayed data or text files, display or display format issues, software bugs or problems, upgrade or customization issues, misinterpretation of the display, warning and/or limit settings, calibration problems, installation issues (leaks, mis-wiring, obstructions, damage to aircraft or components, incorrect installation of any parts, wrong parts, parts that don't fit, etc.) or any other issues related to the installation or operation of this product. All of the above are solely the pilot's and/or installer's responsibility. The pilot **must** understand the operation of this product before flying the aircraft. The pilot must not allow anyone to operate the aircraft that does not know the operation of this product. The pilot must keep the instrument Operating Instructions in the aircraft at all times. If you do not agree to the above, **DO NOT INSTALL THIS PRODUCT.** This product may be returned for a refund. Contact Electronics International Inc. for details.

Do not install a non-certified CGR-30C-() ("CGR") in a certified aircraft. A certified CGR lists the applicable TSO numbers at the bottom of the Model Label.

Before starting the installation make sure the unit will fit in the location you intend to install it without obstructing the operation of any controls.

Important Notice

***** MUST READ *****

Page 2 of 4

If the CGR is configured to monitor the aircraft's fuel tanks, the CGR must be calibrated to the aircraft fuel system and the CGR's accuracy must be verified before flying the aircraft.

The accuracy and proper operation of each function displayed on the CGR should be verified before the aircraft is released for flight.

When the installation is finished, inspect the system for loose fittings, connections, clamps, probes and inspect for leaks, chafing, obstructions, heat damage and anything that may cause unsafe flight before the 1st run-up, after the 1st run-up and after the first flight.

Before allowing the aircraft to be flown, verify the instrument markings displayed on the CGR screens are accurate with the aircraft's POH for every function displayed on the CGR.

Before allowing anyone to operate the aircraft they must read the Operating Manual including the Important Notice there in. Keep the Operating Instructions in the aircraft at all times.

The use of the CGR requires recurring training for any pilot that will be flying the aircraft in which it is installed. Recurring training should include reading the CGR Installation Manual and Operations Manual and seeking a flight instructor for proper interpretation of information being displayed to the pilot.

Fuel Level Accuracy Limitations:

The accuracy limitations of the CGR are listed below. **It is the pilot/owner's obligation to make anyone flying the aircraft aware of these limitations.**

- 1. Angle of Attack** - The CGR must be calibrated with the aircraft in a cruise angle of attack. If the aircraft is in an angle of attack other than cruise, the CGR may display inaccurate fuel levels (depending on the mounting location and type of sensor used). If your aircraft does not sit at a cruise angle of attack when on the ground, it may not display accurate fuel levels. **Test your aircraft at different angles of attack to see the affects on the CGR fuel level readings.**
- 2. Full Fuel Readings** - As a tank is filled, the fuel sensor may not be able to detect the fuel entering the upper corners of the fuel tank. If this is the case with your sensor, the CGR will display lower fuel levels than the actual fuel in the tanks when the tanks are full. When the fuel level drops to a point where the fuel sensor starts to detect a change, the displayed fuel level should be accurate. **Check the accuracy of your system by comparing the displayed fuel levels on the CGR to the fuel levels listed in the flight manual at each fill up.**
- 3. Low Fuel Readings** - **Do not rely on the CGR to determine the fuel level in the tank for an indicated tank level below 1/8.** You should always fly the aircraft in such a manner as to maintain at least the FAA minimum fuel requirements in the aircraft at all times.
- 4. Improper Calibration** - If the CGR has not been properly calibrated it will not display accurate fuel levels in the tanks. It is important you verify the accuracy of the CGR. **Always crosscheck your measured fuel levels in the tanks with the readings on the CGR before each flight.**

Important Notice

******* MUST READ *******

Page 3 of 4

5. Poor Connections - Poor connections between the wires leading from the EDC to the fuel sensors can become intermittent. An intermittent connection most likely will show up as wandering or inaccurate readings on the CGR. **Always crosscheck your measured fuel levels in the tanks with the readings on the CGR before each flight.**

6. Defective Fuel Level Sensors - Fuel sensors can become intermittent or change resistance with age. It is not uncommon to find intermittent problems even in new sensors. An intermittent problem with a fuel sensor most likely will show up as wandering or inaccurate readings on the CGR. **Always crosscheck the measured fuel levels in the tanks with the readings on the CGR at each fill up.**

If you ever find an inaccuracy issue or any other problem with a fuel level display on the CGR, troubleshoot and fix the problem before flying the aircraft.

If you do not agree to all of the above, **DO NOT INSTALL THIS PRODUCT.** This product may be returned for a refund. Contact Electronics International Inc. for details.

Important Fuel Level Considerations:

DO NOT RELY SOLELY ON THE FUEL LEVEL DISPLAYED ON THE CGR TO DETERMINE THE FUEL LEVELS IN THE AIRCRAFT. The use of the CGR does not eliminate or reduce the necessity for the pilot to use good flight planning, preflight and in-flight techniques for managing fuel. It is important the pilot adopt the practices listed below. If you are not familiar with these techniques, contact the FAA to acquire proper training.

- 1. A copy of the Operating Manual must be in the aircraft at all times.**
- 2. Flight Planning** - Always calculate the fuel requirement for each leg of a flight, including any alternate plans for bad weather. Keep this information available in the aircraft during the flight. Keep a chart of the published fuel flows for various flight/engine conditions in the aircraft. Keep a chart of the measured fuel flows for various flights in the aircraft. Measured fuel flows can be considerably different from published figures. This usually is due to old, inaccurate engine instruments.
- 3. Preflight** - **Do not rely on the CGR to determine the fuel level in the fuel tanks. The pilot must visually check/measure the fuel levels in the tanks before every takeoff.** Crosscheck the measured fuel levels with the displayed levels on the CGR. Also, crosscheck these levels with the fuel requirements for the flight listed in your flight plan.
- 4. In Flight** - Make the CGR part of your normal instrument scan. **Crosscheck the fuel levels displayed on the CGR with your flight plan at each leg of the flight or every 30 minutes (whichever happens first).** If there is a discrepancy, land the aircraft at the nearest airport and verify the fuel levels. **Discrepancies should be taken seriously.**

Important Notice

******* MUST READ *******

Page 4 of 4

- 5. New Pilot or Owner of the Aircraft - If there is a new pilot or owner of the aircraft, it is the previous aircraft pilot's/owner's responsibility to insure the new pilot has read this manual and is aware of any accuracy limitations and other important considerations. All limitations and operating characteristics learned from operating the CGR must be passed on to the new pilot/owner.**

If you do not agree or are unwilling to comply with the information/requirements contained within this Important Notice, **DO NOT INSTALL THIS PRODUCT.** This product may be returned for a refund. Contact Electronics International Inc. for details.

Contents

Warranty/Agreement	9
1.0 System Overview	11
1.1 System Description	13
1.1.1 CGR Display	13
1.1.2 EDC-33P-().....	13
1.1.3 Probes, Transducers and Modules	13
1.1.4 Wiring & Extension Cables	13
1.2 Operational Overview	14
1.3 Installation Overview	14
2.0 Hardware Installation	15
2.1 Important Information and Initial Check Out:	17
2.2 Review the "EDC Wiring Work Sheets:"	18
2.3 Verify you have all the necessary Probes, Modules, Transducers and Cables: ---	18
2.4 Install the CGR Display:	18
2.5 Install the Temperature Probes:	19
2.6 Install the Pressure Transducers:	21
2.7 Install the Interface Circuit for Annunciators	23
2.8 Install the CO Detector, G-Sensor and/or Other Available CGR Options: ----	24
2.9 Install the Shunt:	24
2.10 Install the Fuel Flow Transducer:	27
2.11 Install the P-300C Fuel Level Probes (OEM or Experimental)	33
2.12 Install the P-300M Fuel Level Sender:	33
2.13 Install the Resistive Fuel Level Module (RFLM-4-X):	34
2.14 Install the Intensity Control Pot CP-1A (optional):	34
2.15 Install the Master Warning (red) and Caution (yellow) Lights:	35
2.16 Install the Interface Circuit for a PWM Backlight System (Optional):	35
2.17 Install the USB-6A (optional):	36
2.18 Install the FM-SC or AC-1 Converter (optional):	36
2.19 Install any Additional Modules (optional):	36
2.20 Install the EDC-33P-():.....	36
3.0 Install the EDC Wire Harnesses and Route Wires	37
3.1 Attach the three EDC 37-pin wire harnesses to the EDC:	39
3.2 Connect the EDC Harness to the Temperature Probes:	39
3.3 Connect the EDC Harness to the Pressure Transducers:	39
3.4 Connect the EDC Harness to the Shunt:	39
3.5 Connect the EDC Harness to the Fuel Flow Transducer:	40
3.6 Connect the EDC Harness to the Existing Capacitive Fuel Level System: ----	40
3.7 Connect the RFLM-4-x Harness to the EDC Connector and to the Resistive Fuel Level Sensors:	41
3.8 Connect the EDC Harness to the EI P-300C Capacitive Fuel Level Probes: ----	41
3.9 Connect the EDC Harness to the P-300M Magnetic Fuel Level Senders: ----	42
3.10 Connect the EDC Harness (Volts Measurement Pin) to the Bus:	42
3.11 Connect the EDC Harness to the RPM Signals:	42

Contents

3.12	Setup the EDC for a 4 or 6-Cylinder Engine: -----	42
3.13	Connect the EDC Harness to Power and Ground: -----	42
3.14	Route the EDC 5V-Serial Wire to the CGR Connector: -----	43
4.0	Install the CGR Wire Harness and Route the Wires -----	45
4.1	Attach the CGR 25-pin D-sub Connector to the CGR: -----	47
4.2	Connect the EDC 5V-Serial Output Wire to the CGR 5V-Serial Input Wire: --	47
4.3	Connect the CGR Harness to the Master Warning and Caution Lights: -----	47
4.4	Connect the CGR Harness to Power and Ground: -----	47
4.5	Connect the CGR Harness to the CO-Guardian CO Detector: -----	48
5.0	Mandatory System Setup and Checkout -----	49
5.1	Power-On Checkout: -----	51
5.2	Perform all Steps Listed in the "CGR-30P-() Setup Checklist":-----	51
5.3	Ground Run Checkout -----	51
5.4	First Flight Checkout -----	52
5.5	Read the "Warranty/Agreement" and the "Important Notice" -----	52
6.0	Installation Data -----	53
6.1	Instructions for Continued Airworthiness (ICA): -----	55
6.2	Airworthiness Limitations: -----	55
6.3	Installing a D-sub Pin onto a TC or Tin Copper Wire: -----	55
	CGR-30P-() Wiring Work Sheet-----	57
	EDC Wiring Work Sheet Top Connector -----	58
	EDC Wiring Work Sheet Middle Connector -----	59
	EDC Wiring Work Sheet Bottom Connector -----	60
	EDC Template -----	61
7.0	Troubleshooting -----	63
7.1	CGR or EDC Problem -----	65
7.2	Pressure Problem with one Function -----	66
7.3	Temperature Problem on all Channels -----	66
7.4	Temperature Problem with one Function -----	67
7.5	RPM Problem -----	67
7.6	Fuel Flow Problem -----	68
7.7	Amp Problem -----	69
7.8	Resistive Fuel Level Problem -----	69
7.9	Capacitive Fuel Level Problem -----	70
7.10	Voltage Problem -----	71
8.0	Technical Data -----	73
	Specifications, Functions and Features -----	75
Appendix	-----	81
	STC and AML -----	83-100

Warranty / Agreement

Electronics International Inc. (EI) warrants this instrument and system components to be free from defects in materials and workmanship for a period of one year from the user invoice date. EI will repair or replace any item under the terms of this Warranty provided the item is returned to the factory prepaid.

1. **If you do not agree to and accept ALL the terms of this Warranty/Agreement, DO NOT Install This Product.** You may return the product for a refund, contact Electronics International Inc. for details.

2. Electronics International Inc. is not liable or responsible for a pilot's action or any situation that results in personal injury, property damage, missed commitments, lack of use of an aircraft or any expenses incurred due to: product failure, inaccuracy in displayed data or text files, display or display format issues, software bugs or problems, upgrade or customization issues, misinterpretation of the display, warning and/or limit settings, calibration problems, installation issues (leaks, mis-wiring, obstructions, damage to aircraft or components, incorrect installation of any parts, wrong parts, part that don't fit, etc.) or any other issues related to the installation or operation of this product. All of the above are solely the pilot's and/or installer's responsibility. The pilot **must** understand the operation of this product before flying the aircraft. The pilot will not allow anyone to operate the aircraft that does not know the operation of this product. The pilot will keep the instrument's Operating Instructions in the aircraft at all times.

By installing this product, the aircraft owner/pilot and installer agree to hold Electronics International Inc. harmless and in no way responsible for monetary compensation, including punitive damages for any incident, harm and/or damage associated with this product (including but not limited to the ones listed above). If you do not agree to any part of this Warranty/Agreement, **DO NOT INSTALL THIS PRODUCT.**

3. This Warranty/Agreement shall not apply to any product that has been repaired or altered by any person other than Electronics International Inc., or that has been subjected to misuse, accident, incorrect wiring, negligence, improper or unprofessional assembly or improper installation by any person. **This warranty does not cover any reimbursement for any person's time for installation, removal, assembly or repair.** Electronics International retains the right to solely determine the reason or cause for warranty repair.

4. This warranty does not extend to any machine, vehicle, boat, aircraft or any other device to which the Electronics International Inc. product may be connected, attached, interconnected or used in conjunction with in any way.

5. Personal injury or property damage due to misinterpretation or lack of understanding of this product is solely the pilot's responsibility. The pilot **must** understand all aspects of the operation of this product before flying the aircraft. If he/she does not, he or she agrees to seek training from a knowledgeable instructor. The pilot also agrees that no one will be allowed to operate the aircraft who does not know the operation of this product and will **Keep the Operating Instructions in the aircraft at all times.**

6. The obligation assumed by Electronics International Inc. under this warranty is limited to repair, replacement or refund of the product, at the sole discretion of Electronics International Inc.

7. Electronics International Inc. is not liable for expenses incurred by the customer or installer due to factory updates, modifications, improvements, changes, or any other alterations to the product that may affect the form, fit, function or operation of the product.

(Continued On Back of this Page)

8. Electronics International is not responsible for shipping charges or damages incurred under this Warranty.
9. No representative is authorized to assume any other liability for Electronics International Inc. in connection with the sale of Electronics International Inc. products.
10. **You must read the entire Installation and Operating Instructions for this instrument. If you do not agree to and accept the terms of this Warranty/Agreement and the responsibilities set forth in these manuals, DO NOT install this product. Contact E.I. for a refund.**

This Warranty is made only to the original user. **THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES OR OBLIGATIONS: EXPRESS OR IMPLIED. MANUFACTURER EXPRESSLY DISCLAIMS ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. PURCHASER AGREES THAT IN NO EVENT SHALL MANUFACTURER BE LIABLE FOR SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING LOST PROFITS OR LOSS OF USE OR OTHER ECONOMIC LOSS. EXCEPT AS EXPRESSLY PROVIDED HEREIN, MANUFACTURER DISCLAIMS ALL OTHER LIABILITY TO PURCHASER OR ANY OTHER PERSON IN CONNECTION WITH THE USE OR PERFORMANCE OF MANUFACTURER'S PRODUCTS, INCLUDING SPECIFICALLY LIABILITY IN TORT.**

System Overview

1.1 System Description

1.1.1 CGR Display:

1.1.2 EDC-33P-():

1.1.3 Probes, Transducers and Modules:

1.1.4 Wiring & Extension Cables:

1.2 Operational Overview:


1.3 Installation Overview:

Blank Page

1.1 System Description:

The CGR-30Cx Glass Panel Engine Monitor installation consists of four major components: CGR Display, Engine Data Converter (EDC-33P-()), Probes, Transducers & Modules, and the Wiring and Extension Cables.

1.1.1 CGR Display:

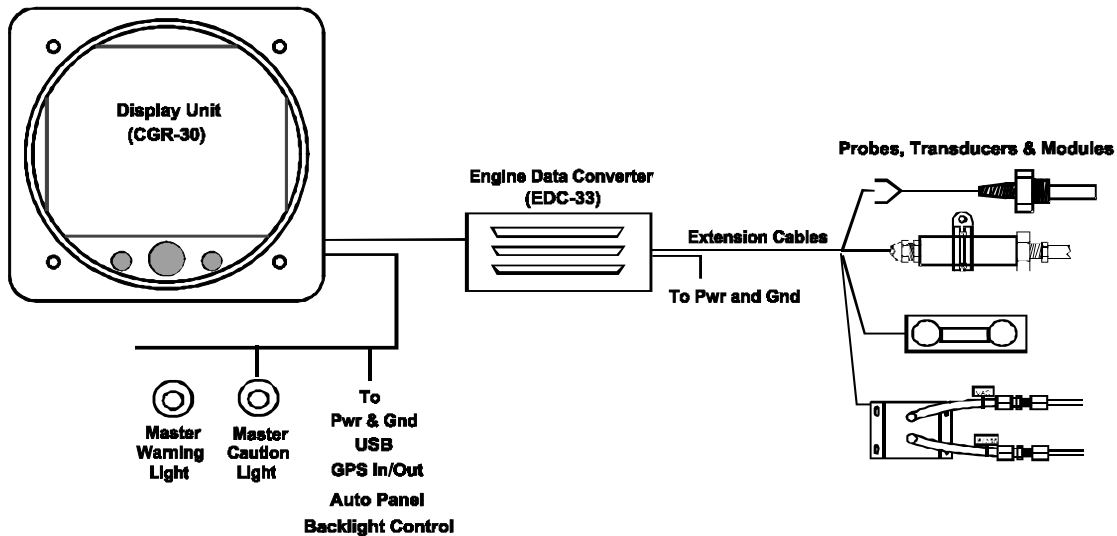

The CGR-30C-() display measures 3.25" wide by 3.25" high by 4.36" deep and mounted in a 3 1/8" (3.125") hole and the CGR-30A-() measures 2.58" wide and high by 3.81" deep and mounts in a 2 1/4" hole.

The D-sub connector on the back of the CGR display's is used to interface the CGR to the EDC-33P-(), Power & Ground, Master Warning and Caution Lights.

1.1.2 EDC-33P-():

The EDC-33P-() (Engine Data Converter, "EDC") converts all of the engine and aircraft system signals into serial data. This data is transmitted to the CGR display via one wire 5V-Serial Bus. Up to two EDCs can be connected to the CGR display. The EDC measures 4.5" long by 3.5" wide by 2.2" high and is to be mounted on the cockpit side of the firewall or in an equipment bay. The EDC reduces the wire bundle to the instrument panel by over 100 wires. There are three 37-pin D-sub connectors that interface the EDC to the various probes, transducers and modules. A single EDC may be used to drive multiple CGR display units.

1.1.3 Probes, Transducers and Modules:

The various probes, transducers and modules are mounted in the aircraft at appropriate locations.

1.1.4 Wiring & Extension Cables:

The extension cables and wiring provide the connections from the probes, modules or direct connections to the EDC inputs. Once the Wiring and Extension Cables are installed into the aircraft they become semi-permanent. Everything else (CGR, EDC, Probes and Modules) can be easily disconnected and removed.

1.2 Operational Overview:

The CGR systems measure a primary engine or aircraft function using a probe or transducer and displays that function on the CGR screen using the following steps:

- A. A probe is mechanically connected to the aircraft and electrically connected to an EDC input. The pre-wired harness provides most of the electrical connections from the probes to the EDC inputs.
- B. The EDC converts the signals from the probes to a digital format and sends the data to the CGR through the serial bus. The EDC has 33 inputs. Many of these inputs can be used to monitor various types of functions.
- C. The CGR receives the data from the EDC and the data is processed through the CGR as follows:
 - 1. The data is assigned to a function.
 - 2. The function is assigned calibration data, units, redlines, limits etc.
 - 3. The function is assigned to a screen location.
 - 4. All data is displayed at the appropriate screen location.

Much of the setup for the certified CGR is done at the factory and cannot be changed by the pilot or installer. See the following Password Protection Section for more information.

1.3 Installation Overview:

The installer may want to use the “CGR-30 Installation Checklist” to install this system. The Checklist is a separate document provided with the CGR-30 system. The installer should start the installation by reviewing the CGR and EDC Wiring Work Sheets. There are four work sheets, one for each of the 37-pin D-Sub connectors on the EDC and one for the CGR. The work sheets are packaged with each of the three EDC wire harnesses and one for the CGR. The work sheets provide a list of the functions and probes/transducers included with this kit. For a twin engine installation refer to appendix A4.0. The installation is achieved by performing the following steps:

- A. The CGR display is installed. The CGR is mounted from behind the instrument panel.
- B. Probes and Transducers are installed.
- C. Control Panels, Pots and Warning Lights are installed.
- D. The EDC is installed. The EDC should be installed on the inside of the cockpit or in an instrument bay with the connectors pointing down. For a twin-engine aircraft it can be installed on the backside (not the engine side) of the firewall with the connectors pointing down.
- E. The Wire Harnesses are installed. The wire harnesses for the EDC and CGR are pre-wired and included in the kit.
- F. Field Calibration/Setup - 5 steps are performed. If Fuel Tanks are to be monitored, they must be calibrated.
- G. System Checkout is performed.

Hardware Installation

- 2.1 Important Information and Initial Checkout:**
- 2.2 Review the "EDC Wiring Work Sheets:"**
- 2.3 Verify You Have all the Probes, Modules, Transducers and Cables:**
- 2.4 Install the CGR Display:**
- 2.5 Install the Temperature Probes:**
- 2.6 Install the Pressure Transducers:**
- 2.7 Install the CO Detector, G-Sensor and/or Other Available CGR Options:**
- 2.8 Install the Shunt (for Amps):**
- 2.9 Install the Fuel Flow Transducer:**
- 2.10 Install the EI P-300C Fuel Level Probes (OEM or Experimental Only):**
- 2.11 Install the EI P-300M Fuel Level Sender:**
- 2.12 Install the Resistive Fuel Level Module (RFLM-4-X):**
- 2.13 Install the Intensity Control Pot CP-1A (Optional):**
- 2.14 Install the Master Warning (red) and Caution (yellow) Lights:**
- 2.15 Install the Interface Circuit for a PWM Backlight System (Optional):**
- 2.16 Install the USB-6A (Optional):**
- 2.17 Install the FM-SC or AC-1 Converter (Optional):**
- 2.18 Install any Additional Modules (Optional):**
- 2.19 Installing the EDC-33P-(-):**

Blank Page

2.1 Important Information and Initial Checkout:

- A. **The installer and aircraft owner must read the Warranty/Agreement before starting the installation.** There is information in the Warranty/Agreement that may alter your decision to install this instrument. **If you do not accept the terms of the Warranty/Agreement, do not install this instrument.**
- B. If you are not an FAA Certified Aircraft Mechanic familiar with the issues of installing engine and aircraft instruments, **do not attempt to install this instrument.** The installer should use current aircraft standards and practices to install this instrument (refer to AC 43.13).
- C. Check that any necessary FAA Approvals for installing this system are available for your aircraft before starting the installation. The STC and AML are located at the back of this manual.
- D. **Check the red, yellow and green limits in the “CGR-30 Configuration” document (provided with the kit). Match the aircraft POH/AFM for each function monitored by the CGR-30. It is important the CGR-30 is properly configured for the engine and aircraft it is to monitor.**
- E. Read the Installation Instructions entirely and resolve any issues you may have **before** starting the installation. This may eliminate any delays once the installation is started.
- F. Inspect the contents of this package prior to installation. **If the CGR-30 system is to be installed in a certified aircraft, verify that the Model Number listed on the TSO label includes the Aircraft ID for which it is intended. Each CGR-30x-() display unit is configured for a specific aircraft or group of similar aircraft.** The configuration defines the displayed functions, limits, colors, screen layouts, and other parameters. The brackets at the end of the CGR model number indicate the aircraft N-number or the group ID for which the CGR was configured. Confirm that this CGR unit is configured for the aircraft in which it will be installed.
- G. **Do not install a non-certified CGR in a certified aircraft.** A certified CGR lists the applicable TSO numbers at the bottom of the Model Label attached to the side of the CGR.
- H. **Before starting the installation make sure the instrument will fit in the intended installation location without obstructing the operation of any controls.** CFR 23.1321(a) states, *“Each flight, navigation, and powerplant instrument for use by any required pilot during takeoff, initial climb, final approach, and landing must be located so that any pilot seated at the controls can monitor the airplane’s flight path and these instruments with minimum head and eye movement.”* AC 23.1311 provides one method (but not the only method) of complying with this CFR. AC 23.1311 recommends a powerplant instrument be installed within a distance of 21" from the pilot’s visual centerline to the middle of the instrument. The pilot’s visual centerline is a perpendicular line from the pilot’s eye to the instrument panel. In most aircraft, installing the CGR-30x to the right of the Radio Stack would be acceptable. In some aircraft, the visual centerline falls to the right of the Attitude Indicator.

If the powerplant instrument cannot be installed within 8" of the pilot’s visual centerline, AC 23.1311 recommends Master Caution and Warning Lights be installed. Installation of Master Caution and Warning Lights is covered in this manual.
- I. If the CGR-30x instrument is to replace an existing gauge or gauges in the aircraft, it is the installer’s responsibility to remove the duplicate gauges or components in accordance with FAA approved methods and procedures (see AC 43.13).
- J. An Installation Checklist is provided to assist the installation of the CGR system. It does not replace the instructions located in this manual.

2.2 Review the "EDC Wiring Work Sheets:"

There are a number of probes and extension cables that will need to be installed. The key to keeping the installation simple is to organize the work using the "EDC Wiring Work Sheets" supplied with this kit. Review the functions assigned to each EDC input on the EDC Wiring Work Sheets. The work sheets are prepared at the factory with the functions and probes already assigned.

2.3 Verify You Have all the Probes, Modules, Transducers and Cables:

The three EDC 37-pin D-sub connectors and the CGR 25-pin D-sub connector are pre-wired at the factory. The three EDC connectors are marked Top, Middle and Bottom. The EDC Wiring Work Sheets provide a list of the probes supplied with this kit. You may be connecting the CGR to an existing EDC already installed in the aircraft.

- A. Check that you have all the probes listed on the EDC Wiring Work Sheets.
- B. Check that the wire harnesses are provided with the proper wires for each of the probes shown on the EDC Wiring Work Sheets.
- C. Check that the CGR D-sub wire harness is provided.

2.4 Install the CGR Display:

Before starting the installation make sure the instrument will fit in the location you intend to install it without obstructing the operation of any controls. Also, the pilot should have a clear view of the CGR display without any visual obstructions. The CGR display is installed from behind the panel. The mounting holes in the face of the CGR-30x have a limited depth. If the mounting screws are driven beyond the depth of the mounting holes, damage to the color display will occur. Mounting screws are provided in the package. These screws must be tightened by hand. If the screws tighten up before the faceplate secures against the panel, the screws are too long and must be shortened.

CFR 23.1321(a) states, *"Each flight, navigation, and powerplant instrument for use by any required pilot during takeoff, initial climb, final approach, and landing must be located so that any pilot seated at the controls can monitor the airplane's flight path and these instruments with minimum head and eye movement."* To comply with this requirement mount the CGR-30x 21" or less from the pilot's visual centerline to the middle of the instrument. The pilot's visual centerline is a perpendicular line from the pilot's eye to the instrument panel. In some aircraft, the visual centerline falls to the right of the Attitude Indicator.

If the CGR display is not installed within 8" of the pilot's visual centerline, the external Master Caution and Warning Lights should be installed. Installation of Master Caution and Warning Lights are covered in this manual.


Important Notice: Install the CGR display in the panel using the supplied 6-32 x 1/4 screws. Longer screws will damage the display. Hand tighten the screws. Check the screws are tight against the panel before they bottom out. Driving the screws through the stops will damage the display.

2.5 Install the Temperature Probes:

Install only the Temperature Probes applicable for your configuration.

A. EGT Probe Installation:

Look at each exhaust stack and determine the best location at which all of the EGT probes can be mounted at the same distance down from the exhaust ports. The ideal location is 1 1/2", but ease of installation should prevail. For our fast response probes drill a 5/32 hole or for our robust probes drill a 13/64" diameter hole in each exhaust stack. Insert the probe and tighten the hose clamp. As the hose clamp is heated and cooled, it will become loose as it conforms to the exhaust stack. After the first 10 hours of operation, each hose clamp should be retightened.

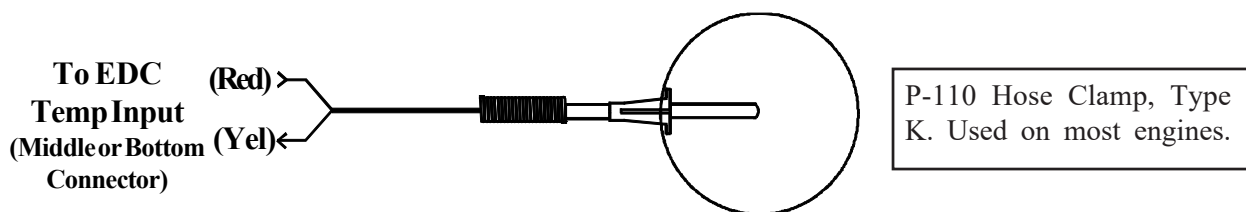


IMPORTANT NOTE: For Cessna 210s or any aircraft having a slip joint in the exhaust system, install the EGT probes ABOVE OR BELOW THE SLIP JOINT. Installing an EGT probe in the slip joint can damage the probe.


B. TIT Probe Installation:

The TIT probe should be installed on the inlet of the Turbocharger one to two inches before the Turbocharger flange. Look at each exhaust stack and determine the best location to install the TIT probe. It should be routed away from the exhaust pipe and should not come in contact with other aircraft components. When installing our fast response probes drill a 5/32 hole or for our robust probes drill a 13/64" diameter hole in each exhaust stack. Insert the probe and tighten the hose clamp.

NOTE: After the first 10 hours of operation, the hose clamp on the P-110 probe should be retightened. As the hose clamp is heated and cooled, it will become loose as it conforms to the exhaust stack.

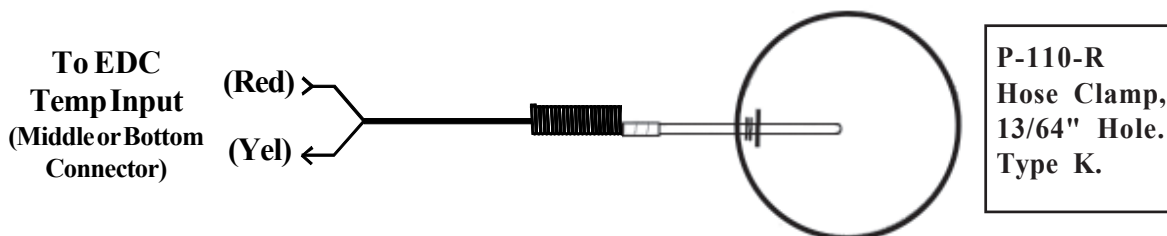


If a P-111, P-112 or P-114 TIT probe is to be installed, perform the steps outlined in the "TIT Probe Depth Adjustment Procedure" that comes with the TIT probe.

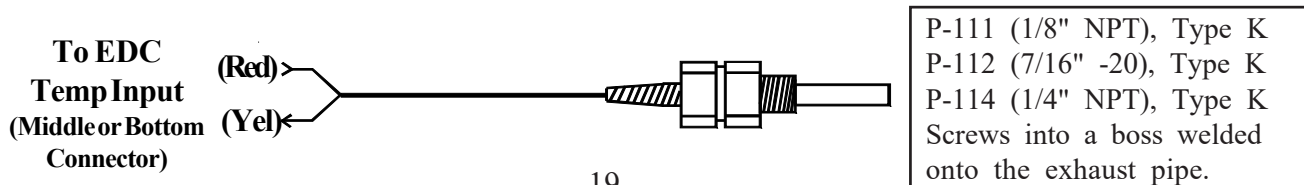

C. CHT Probe Installation:


Most engines have threaded ports for the CHT probes just below the lower spark plug. Install the CHT probes into these threaded ports.

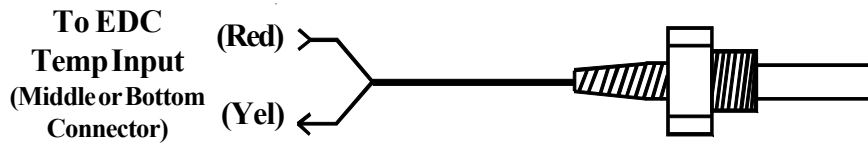

P-100 CHT Probe, 3/8" -24, Type K. Used on most engines.

D. OIL Temperature Probe Installation:

Oil temperature can vary throughout an engine. Your engine's oil temperature specifications are based on a specific location of the oil temperature probe. If the CGR is to be used as the primary oil temperature instrument, install the oil temperature probe (P-120) in the primary oil temperature pick up point for your engine.

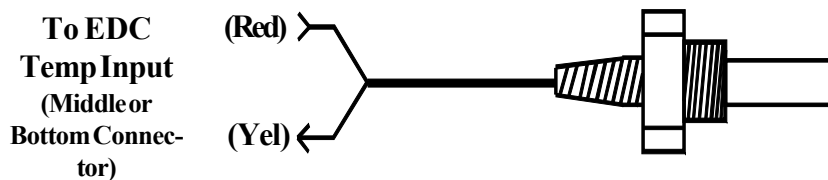


P-120 Oil Temp Probe, 5/8" -18, Type K. Used on most engines.

E. Carb Temp Probe Installation:

Remove the threaded plug located in the carburetor housing just below the throttle valve. Install the Carburetor Temperature Probe (P-128) in this hole using a lock washer. Care should be taken not to over-tighten the probe, thereby stripping the threads in the carburetor housing.

To EDC
Temp Input
(Middle Connector, Ch 8
Recommended)

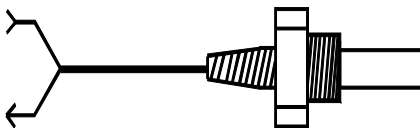


P-128 Carb Temp / OAT Probe, 1/4" -28, Type K. Used on most engines.

F. OAT Probe Installation:

Mount the OAT Probe in an appropriate location on the aircraft, using the hardware supplied. The OAT Probe is sensitive to air temperature changes. For this reason, do not mount the OAT probe in the path of the cowl or engine exiting air (i.e., on the belly of the aircraft). Also, if the probe is mounted in the cowl area near a turbo or hot cylinder head, radiant heat may influence the probe temperature. Other than these considerations, the OAT Probe may be mounted in an air intake vent, on the side of the cowl or anywhere else on the aircraft.

To EDC
Temp Input
(Middle Connector, Ch 8
Recommended)

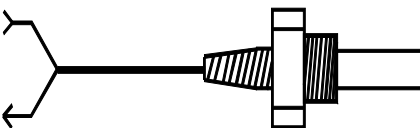

P-128 Carb Temp / OAT Probe, 1/4" -28, Type K. Used on most engines.

G. Other Temperature Probe Installation:

Other temperature probes (Cowl Temp, CDI Temp, Water Temp, etc.) may be installed using current aircraft standards and practices (refer to AC 43.13). Make sure these probes do not interfere with the operation of the engine or aircraft.


2.6 Install the Pressure Transducers:

Install only the Pressure Transducers applicable for your configuration.

A. Manifold Pressure Transducer Installation:

Mount the PT-30ABS Pressure Transducer on the inside firewall or in the equipment bay under the aircraft instrument panel. Use the holes in the bottom plate to mount the PT-30ABS. Only two mounting holes are required.

An equipment bay can be made from a sheet of aluminum. Any piece of equipment or module used with the CGR-30 can be mounted on the aluminum sheet using a Nut Plate or Riv-Nut to allow easy installation and removal. The aluminum sheet is then mounted to the inside firewall of the aircraft (using short spacers) and should never have to be removed. Many aircraft are designed with an equipment bay.

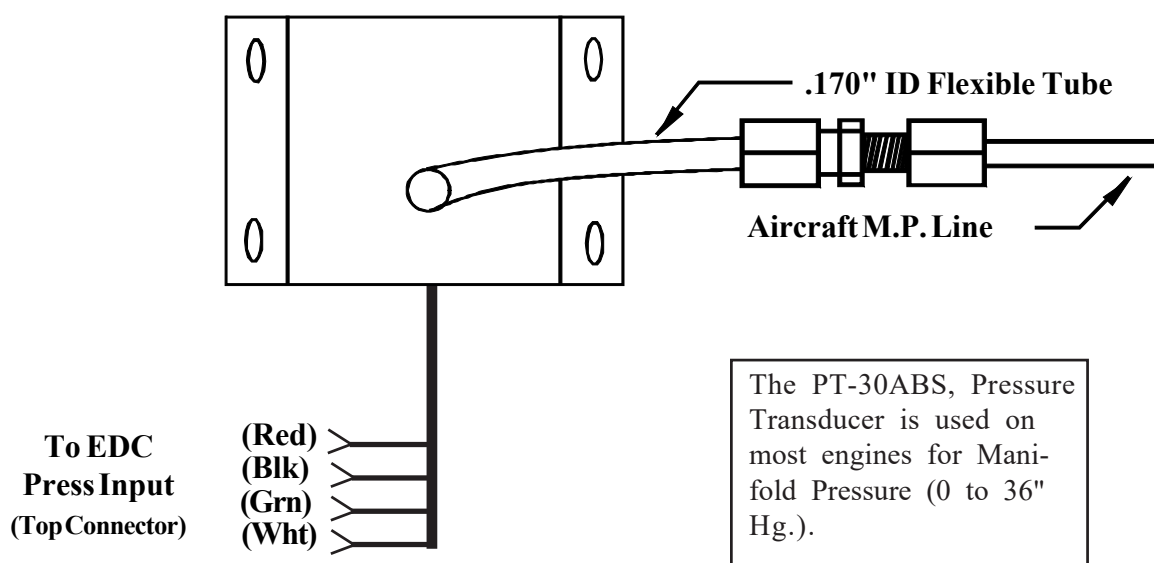

Connect the aircraft manifold pressure line to the pressure port on the PT-30ABS Pressure Transducer. A flare or barb fitting may be used to connect these lines. Care should be taken not to put excess pressure on the flexible line leading to the pressure transducer. **Make sure there are no kinks in the flexible pressure lines.**


Note: Many certified aircraft have a very small hole in the manifold pressure line to create airflow back to the intake manifold. This small flow of air keeps fuel from working its way into the manifold pressure gauge (or transducer), which can cause damage to the transducer over time.

Note: The PT-30ABS can measure manifold pressure up to 36.0" Hg. For manifold pressures above 36.0" Hg. use the PT-60ABS pressure transducer.

B. Gyro Vacuum Pressure Transducer Installation:


Mount the PT-05Diff Pressure Transducer on the inside firewall or in the equipment bay under the aircraft instrument panel. Use the holes in the bottom plate to mount the PT-05Diff. Only two mounting holes are required.

Connect the aircraft gyro vacuum line to the port tagged "Vac" on the PT-05Diff. Connect the port tagged "Press" to the aircraft overboard pressure line. A flare or barb fitting may be used to connect these lines. Care should be taken not to put excess pressure on the flexible line leading to the pressure transducer. **Make sure there are no kinks in the flexible pressure lines.**

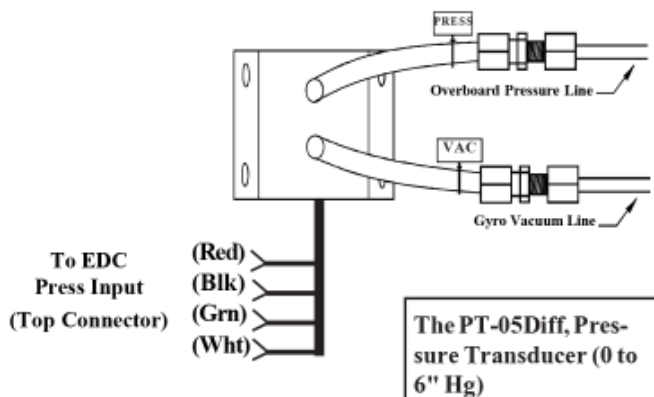


C. Oil Pressure Transducer Installation:

Find a convenient location on the firewall or a bracket and mount the pressure transducer with the clamp. The fuel pressure line does not have to be routed into the cabin area although you will need access on the cabin side of the firewall to tighten the pressure transducer clamp nut. **Do not mount the pressure transducer to an engine baffle or directly onto the engine with the transducer supported by an adapter or fitting.** Vibration can cause the adapter to break, resulting in loss of engine fuel. The pressure transducer is equipped with a 1/8" NPT male port. This port can be adapted to any fuel pressure line. Use only a flexible hose and fittings suitable for aircraft use. Route a flexible fuel pressure line from the primary fuel pressure pick up point to the pressure transducer and tighten all fittings. **Do not use the case of the pressure transducer to tighten the pressure fittings.** Maintain any restrictive orifice currently in the system.

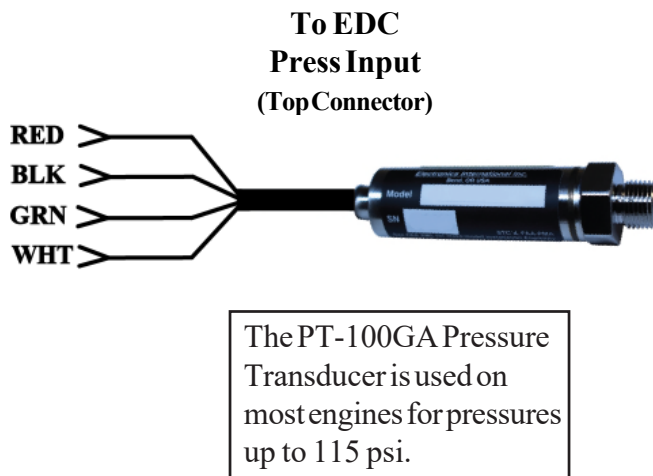

* Some fittings you may want to consider using are listed below.

Important Note: Aluminum fittings should only be used when flex lines are mounted on the inlet of the pressure transducer. Otherwise, steel, SS or brass fitting should be used.

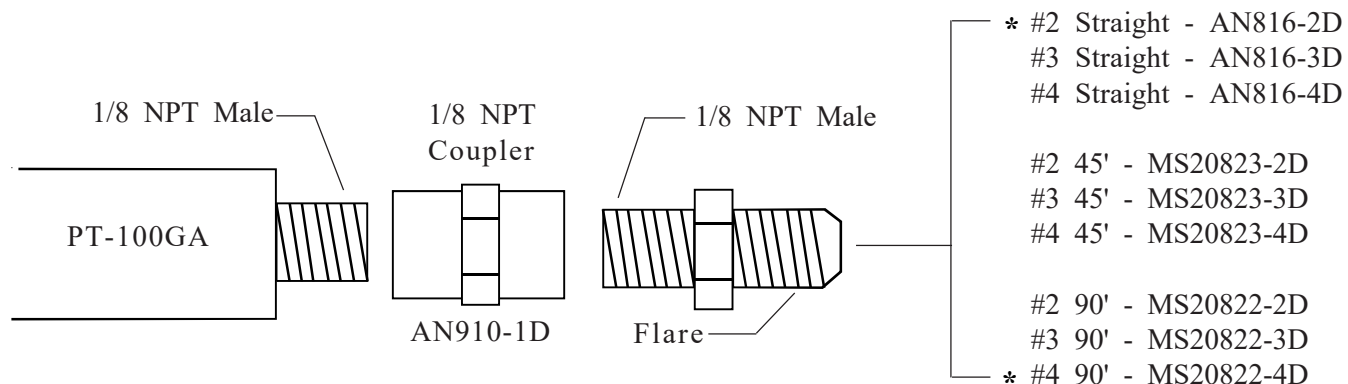

D. Fuel Pressure Transducer Installation:

Find a convenient location on the firewall or a bracket and mount the pressure transducer with the clamp provided. The fuel pressure line does not have to be routed into the cabin area although you will need access on the cabin side of the firewall to tighten the pressure transducer clamp nut. **Do not mount the pressure transducer to an engine baffle or directly onto the engine with the transducer supported by an adapter or fitting.** Vibration can cause the adapter to break, resulting in loss of engine fuel. The pressure transducer is equipped with a 1/8" NPT male port. This port can be adapted to any fuel pressure line. Use only a flexible hose and fittings suitable for aircraft use. Route a flexible fuel pressure line from the primary fuel pressure pick up point to the pressure transducer and tighten all fittings. **Do not use the case of the pressure transducer to tighten the pressure fittings.** Maintain any restrictive orifice currently in the system.



The PT-30GA Pressure Transducer is used on most engines for pressures up to 35 psi.

* Some fittings you may want to consider using are listed above.

E. Other Pressure Transducer Installations:


Other pressure transducers should be mounted in the aircraft in the same manner as the Gyro Vacuum Transducer or the Oil and Fuel Pressure Transducers, as appropriate. **Note:** Any unused + or - pressure inputs must be wired to a ground pin on the EDC 37-pin connector.

2.7 Install the Interface Circuit for Annunciators:


Any Temperature or Resistive Fuel Level channel on the EDC may be used to monitor the state of a switch, relay or output from a device. This output can be used to trigger a light (annunciator) on the CGR. Annunciator lights such as Canopy Latch, Baggage Door, Deice, Pitot Heat, Fire, etc. can be displayed on the Main or Second screen on the CGR.

To monitor a voltage, a VI-221 (Voltage Interface Unit) will be required. This consists of a 221K ohm resistor heat shrunk between two wires with a D-Sub pin crimped on one end. The following methods may be used to interface an EDC channel (using a VI-221) to a switch, relay or device:

A. Monitoring a Signal That Switches Between Any Voltage and Ground:

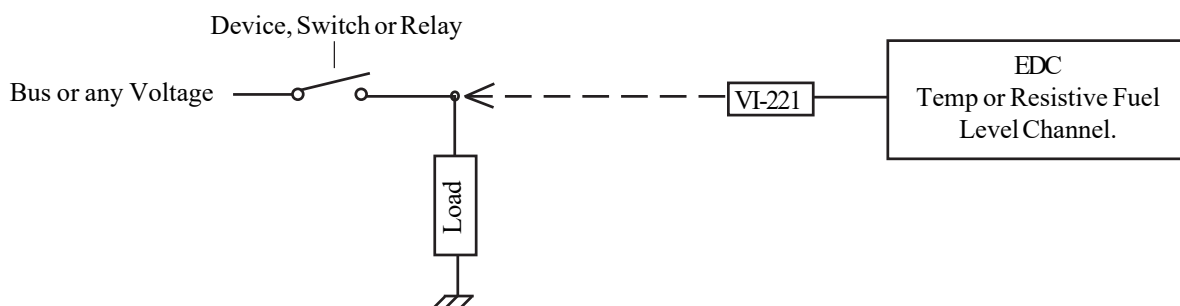

B. Monitoring a Signal that is Switched to Ground:

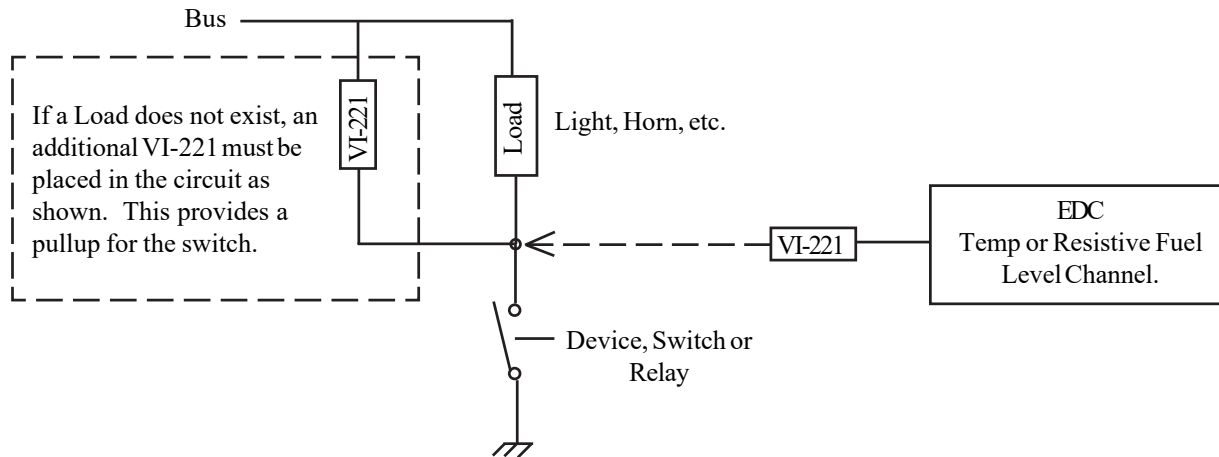

2.8 Install the CO Detector, G-Sensor and/or Other Available CGR Options:

The CO Guardian Remote Mounted CO Detector, G-Sensor and other CGR options listed on EI's price sheet are provided with their own installation instructions. These items should be installed and wired in accordance with the accompanying instructions. Note: The CO Detector connects to Port 4 or Port 3 Input on the CGR.

2.9 Install the Shunt (for Amps):

An external shunt is a strip of metal, usually mounted on a bakelite base. This metal is made of special alloys to produce a very small, precise signal when current passes through it. It is not affected by temperature changes. If your aircraft currently has an external shunt you can calibrate your CGR to that shunt. The CGR can be calibrated to match any shunt on the market.

A. Determine How the Shunt will be Installed in the Aircraft's Electrical System:

There are two common methods of installing a shunt in an aircraft. One method is with the shunt in the alternator lead. The other method is with the shunt located in the battery lead. The S-50 shunt that comes with the CGR-30 package may be installed using either method. The advantages and disadvantages of each method are listed below.

There are few disadvantages with either method. Although EI's test pilot has a slight preference for the alternator lead when using the CGR, ease of installation should be the determining factor in this installation. If more than one shunt is required, a second shunt can be installed through a FM-VA-M-(50 or 300) Functional Module. The Functional Modules come with their own installation instructions.

Installation Method	Advantages	Disadvantages
Battery Lead:	1. Shows load current on the ground (engine off) and during an alternator failure. 2. All Warning Lights are operational.	1. Cannot show load current during flight or when the engine is running.
Alternator Lead:	1. Shows load current during flight or when the engine is running. 2. All Warning Lights are operational.	1. Cannot show load current when the engine is off or during an alternator failure.

S0224921

B. Install the External Shunt:

The external shunt should be installed in an appropriate location that minimizes the routing of main cables (refer to figure 1 or 2 as appropriate for your installation). It should also be mounted in a location where inadvertent damage cannot occur. If the shunt can be accessed easily, it should be covered. When mounting the shunt, use self-locking or safety-wired nuts

The signal wires from the shunt to the EDC must be fused a short distance after they leave the shunt. If this is a new installation, install two in-line one-amp fuses, one in each of the signal lines from the shunt to the EDC Amp Input.

Note: If you are replacing an existing ammeter, the shunt may already be mounted in the aircraft. If you already have a shunt installed and know the value of the existing shunt, the CGR can be calibrated to that shunt.



Figure 1: External Shunt Installed in the Battery Lead


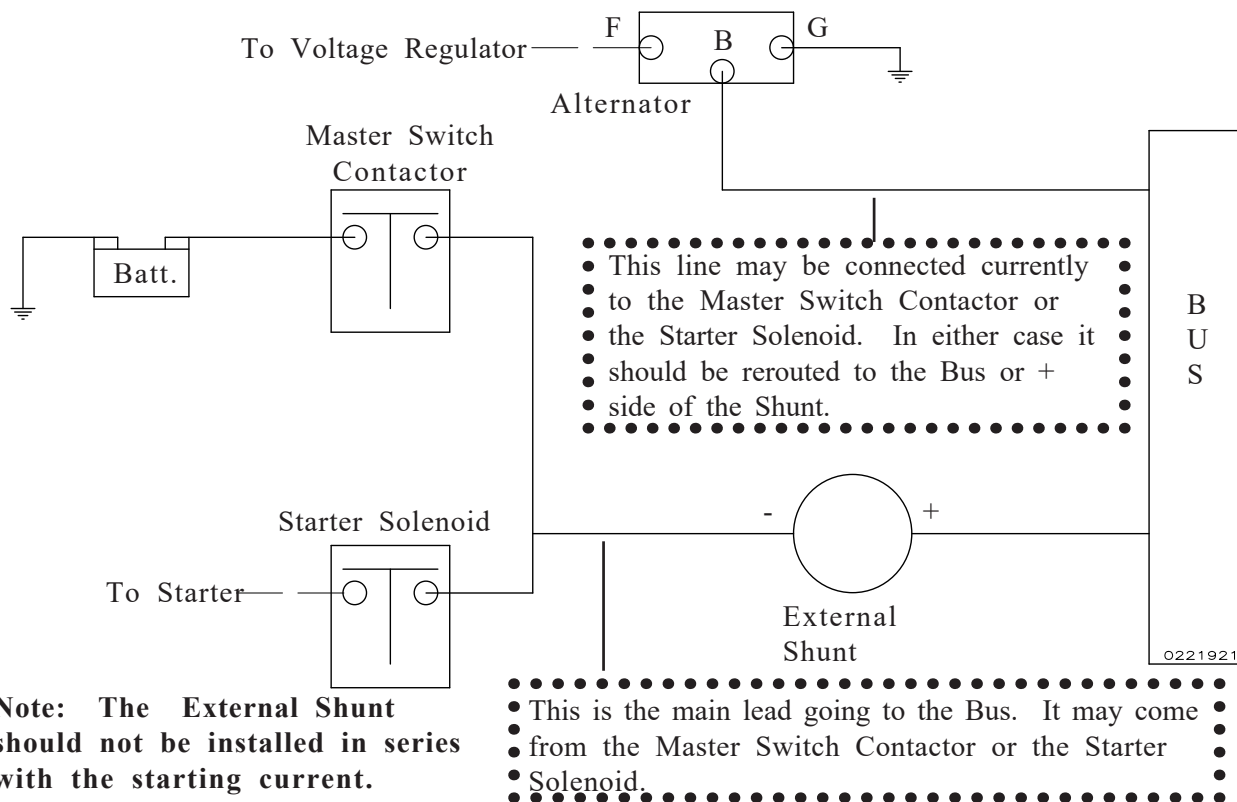


Figure 2: External Shunt Installed in the Alternator Lead

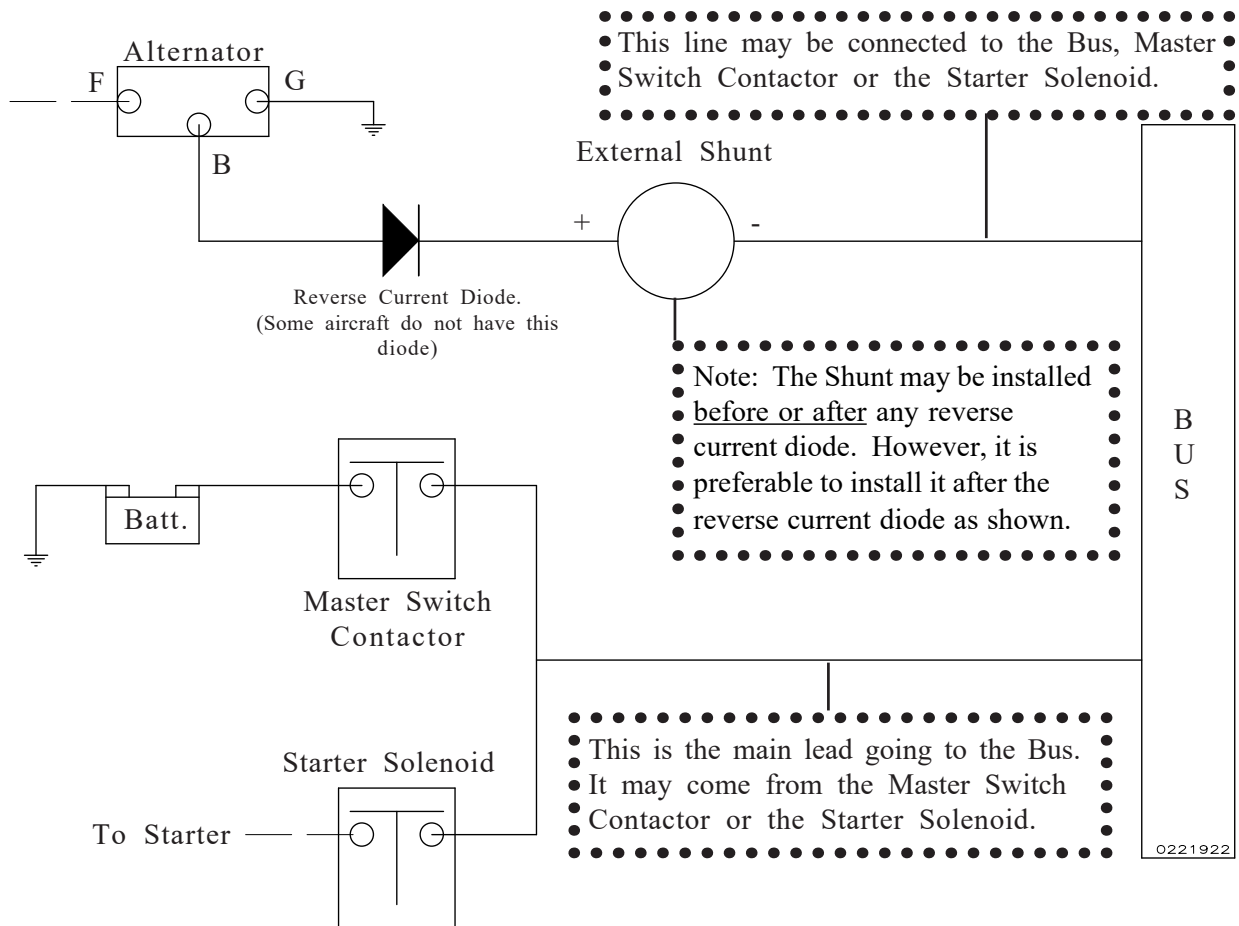

2.10 Install the Fuel Flow Transducer:

Mount the Fuel Flow Transducer using the appropriate drawing found on the following pages.

<i>Aircraft Configuration</i>	<i>Drawing #</i>
Fuel injected engine without a fuel return line from the fuel servo (most Lycomings).	1229932 or 1229931
Fuel injected engine with a fuel return line from the fuel servo (most Continentals).	0415941
Carbureted engine with a fuel pump and no fuel return line.	1229932 or 1229931
Carbureted engine with a fuel pump and a fuel return line (requires an FFDM-1 Module).	1229932 or 1229931, and 1015941
Carbureted engine with a gravity feed fuel system (requires an FT-90 Flow Transducer).	1229932 or 1229931

Fuel Flow Transducer Selection:

FT-60 (Red Cube): For 0 to 350 HP Engines.

FT-90 (Gold Cube): For 350 to 550 HP Engined or gravity feed fuel systems.

FT-180 (Black Cube): For 550+ HP Engines.

(See the transducer specification for pressure drops at a given flow rate.)

Note: If your engine is equipped with a pressure carburetor with a fuel return line from the carburetor back to the fuel tank, you will need to install two flow transducers: one in the feed line from the fuel pump to the carburetor and one in the return line from the carburetor back to the fuel tank. Also, a Fuel Flow Differential Module (FFDM-1) will need to be installed. See drawings 1229932 and 1015941 on the following pages.


Note: Insure the fuel flow transducer is appropriate for the horsepower of the engine.

A. The transducer output port should be mounted lower, even with or no more than 4" per foot higher than the carburetor inlet port (or fuel servo on a fuel-injected engine). If this is not possible, a loop should be put in the fuel line between the Fuel Flow Transducer and the carburetor or fuel servo (see following diagram). This loop is intended to vacate air and keep it from getting trapped in the fuel transducer.

End View


Note: • The direction of the flow of fuel through the transducer is marked on the transducer.

- Mount the transducer with the wires pointing up or the side with five bolts up or the output up or any combination thereof.

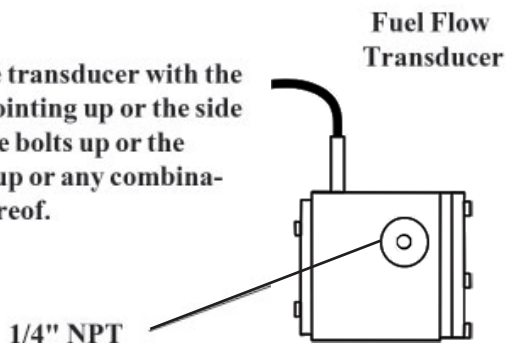



Side View

If the transducer is more than 4" per foot higher than the carburetor or fuel servo port, put a loop in the fuel line between the transducer and the carburetor or fuel servo. This will allow bubbles to vacate the Flow Transducer.

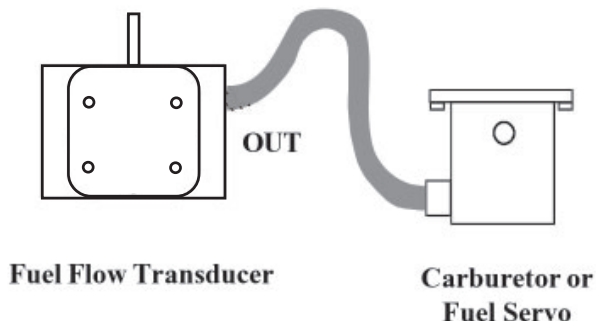


- B. Do not remove the debris caps on the flow transducer until the fuel hoses are ready to be installed.
- C. The flow of fuel through the transducer must follow the direction marked on the transducer.
- D. The flow transducer must be mounted so the wires exiting the transducer are pointing up, or the cap with five bolts is pointing up, or the output port is pointing up, or any combination thereof.
- E. Before connecting any hoses, thoroughly clean them and insure they are free of any loose material. High air pressure may be used, **however, do not allow high air pressure to pass through the flow transducer.**
- F. When mounting a Fuel Flow Transducer, make provisions for the Fuel Pressure Transducer as necessary.
- G. If the flow transducer is hard mounted to a bracket, **DO NOT connect the Black Ground Wire** on the flow transducer. The bracket will provide the necessary ground to the transducer.

You may want to consider using some fittings and hoses shown below. Note: **DO NOT EXCEED a torque of 15 ft. lbs. or screw the fittings tighter than two full turns past hand tight, whichever happens first.**
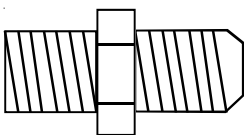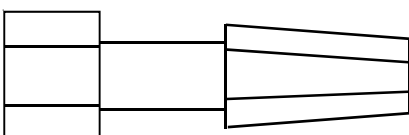
<u>Fittings:</u>		<u>Hose Fittings:</u>	
1/4" NPT		Flare	
#4	Straight - AN816-4-4D	Straight - MS24587-XX, Stratoflex 300-, Aeroquip 400-	
#6	Straight - AN816-6D	45' - MS27226-XX, Stratoflex 646- and 640, Aeroquip 980006	
#8	Straight - AN816-7D	90' - MS27224-XX, Stratoflex 649- and 643, Aeroquip 980005	
#6	45' - MS20823-6D		
#4	90' - MS20822-4-4D		
#6	90' - MS20822-6D		
		NOTE: The Stratoflex teflon hose can be much more flexible and easier to route than most existing hoses. If you have a hard-to-fit installation, you might want to consider this hose.	

Important Note: Aluminum fittings should only be used when flex lines are mounted on the inlet and outlet ports of the flow transducer. Otherwise, steel, SS or brass fitting should be used.

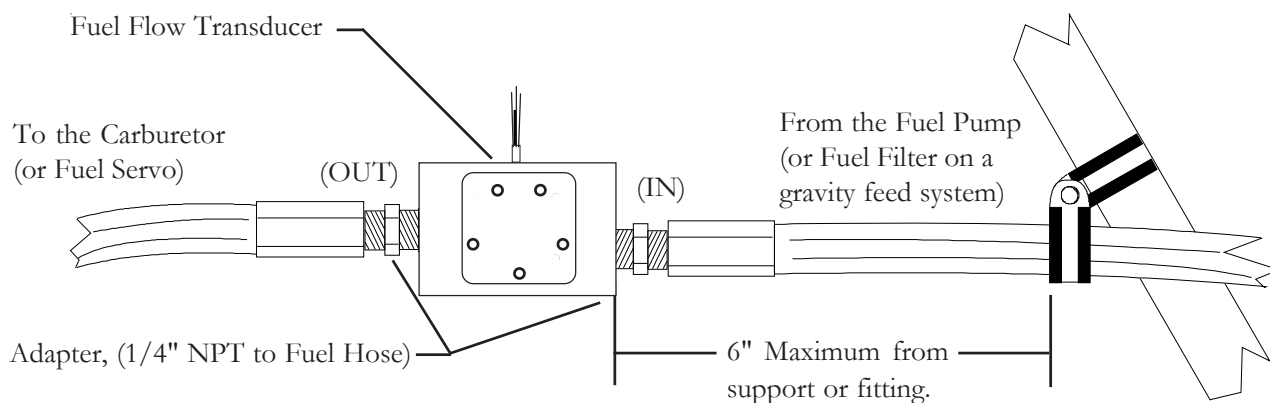


Mounting Procedure:

1. Find a convenient location within 6" of a hose support or fitting and away from any hot exhaust pipes to suspend the Fuel Flow Transducer. The hose support or fitting may be on the input or output line of the Flow Transducer and the support may be to an adjacent hose.
2. Remove the fuel hose which goes from the Fuel Pump (or the Fuel Filter on a gravity feed system) to the Carburetor (or Fuel Servo).
3. Purchase two new hoses: one to be used from the fuel pump (or the Fuel Filter) to the Fuel Flow Transducer and the other to be used from the Fuel Flow Transducer to the carburetor (or Fuel Servo). **There must be flexible hose in and out of the Transducer.** The hoses must meet TSO-C53a Type C or D FAA specifications. **The new hoses must be the same size as the current hoses in the aircraft.** Source of fittings and fabricated hoses are:

Aircraft Spruce
 aircraftspruce.com
 (877) 477-7823

4. Mount the Fuel Flow Transducer in the fuel line. **You must use the FT-90 (Gold Cube) Fuel Flow Transducer on a gravity feed system or for any engine over 350 H.P.** If the Transducer is mounted within 6" of an exhaust pipe, the Flow Transducer must be wrapped with Fire Sleeving.
5. **Read the Installation Instructions for important installation considerations.**

Drawn By:	R.R.	<i>Electronics International Inc.</i>		
Approved By:	R.R.	Installation of a Fuel Flow Transducer suspended in the fuel line <u>from the fuel pump to the carburetor or fuel servo.</u> Note: <u>Not applicable</u> for a fuel-injected engine with a fuel return line (see D/N0415941).		
Scale:	None			
Material:				
Next Assembly:				
P/N:		Date: 12/29/93	Rev: D: 7/2/02	D/N: 1229932

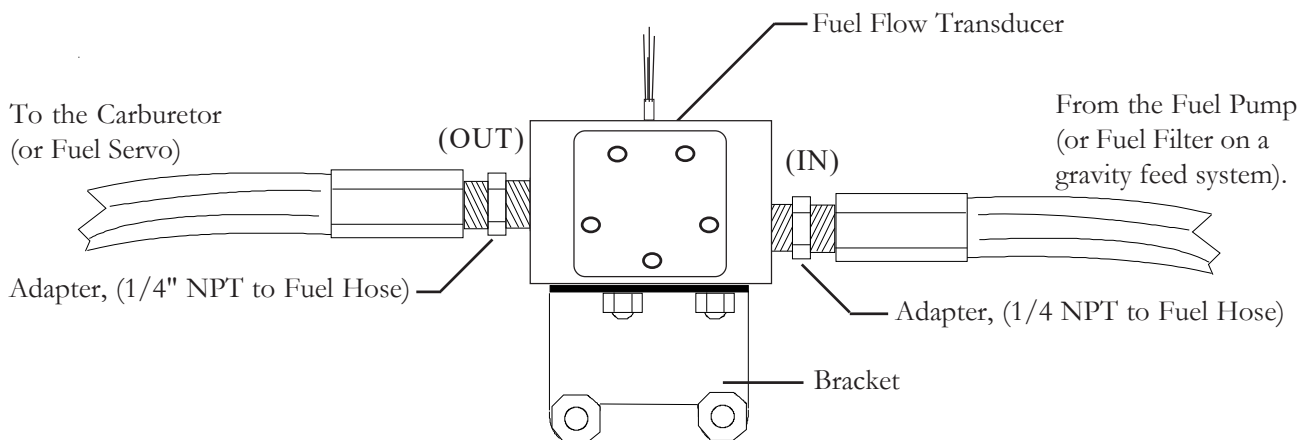

Mounting Procedure:

1. Find a convenient location on the firewall (away from any hot exhaust pipes) and mount a bracket for the Fuel Flow Transducer. Check both sides of the firewall for clearance before drilling any holes.
2. Mount the Fuel Flow Transducer onto the Bracket. **You must use the FT-90 (Gold Cube) Fuel Flow Transducer on a gravity feed system or for any engine over 350 H.P.** If the Transducer is mounted within 6" of an exhaust pipe, the Flow Transducer must be wrapped with Fire Sleeving.
3. Remove the fuel hose which goes from the Fuel Pump (or the Fuel Filter on a gravity feed system) to the Carburetor (or Fuel Servo).
4. Purchase two new hoses, one to be used from the fuel pump (or the Fuel Filter) to the Fuel Flow Transducer (making provisions for the fuel pressure transducer as necessary) and the other to be used from the Fuel Flow Transducer to the carburetor (or Fuel Servo). **There must be flexible hose in and out of the Transducer.** The hoses must meet TSO-C53a Type C or D FAA specifications. **The new hoses must be the same size as the current hoses in the aircraft.** Sources of fittings and fabricated hoses are:

Aircraft Spruce
 aircraftspruce.com
 (877) 477-7823


5. Read the Installation Instructions for important installation considerations.

Drawn By:	<i>Electronics International Inc.</i>		
R.R.	Installation of a Fuel Flow Transducer on the Firewall and in the fuel line <u>from the fuel pump to the carburetor or fuel servo.</u> Note: <u>Not applicable</u> for a fuel-injected engine with a fuel return line (see D/N 0415941).		
Approved By:			
R.R.			
Scale:			
None			
Material:			
Next Assembly:			
P/N:	Date:	Rev:	D/N:
	12/29/93	D: 7/2/02	1229931

To the Flow Divider

Mounting Procedure:


1. Find a convenient location between the Fuel Servo and Flow Divider and away from any hot exhaust pipes to suspend the Fuel Flow Transducer. The Transducer must be mounted within 6" of a hose support or fitting. The support or fitting may be on the input or output line of the Flow Transducer and the support may be to an adjacent hose.
2. Remove the fuel hose which goes from the Fuel Servo to the Flow Divider.
3. Purchase two new hoses: one to be used from the Fuel Servo to the Fuel Flow Transducer and the other to be used from the Fuel Flow Transducer to the Flow Divider. **There must be flexible hose in and out of the Fuel Transducer.** The hoses must meet TSO-C53a Type C or D FAA specifications. **The new hoses must be the same size as the current hoses in the aircraft.** Source of fittings and fabricated hoses are:

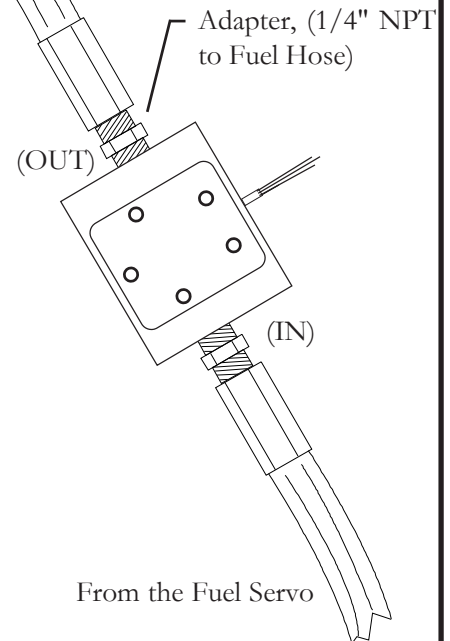

Aircraft Spruce
 aircraftspruce.com
 (877) 477-7823

4. Mount the Fuel Flow Transducer in the fuel line. **You must use the FT-90 (Gold Cube) Fuel Flow Transducer on any engine over 350 H.P.** If the Transducer is mounted within 6" of an exhaust pipe, the Flow Transducer must be wrapped with Fire Sleeving.
5. **Read the Installation Instructions for important installation considerations.**

Drawn By: R.R.	<i>Electronics International Inc.</i>		
Approved By: R.R.	Installation of the Fuel Flow Transducer suspended in the fuel line <u>between the Fuel Servo and the Flow Divider.</u> Note: <u>Only applicable</u> for installation on aircraft with a fuel return line from the Fuel Servo.		
Scale: None			
Material:			
Next Assembly:			
P/N:	Date: 4/15/94	Rev: B: 7/2/02	D/N: 0415941

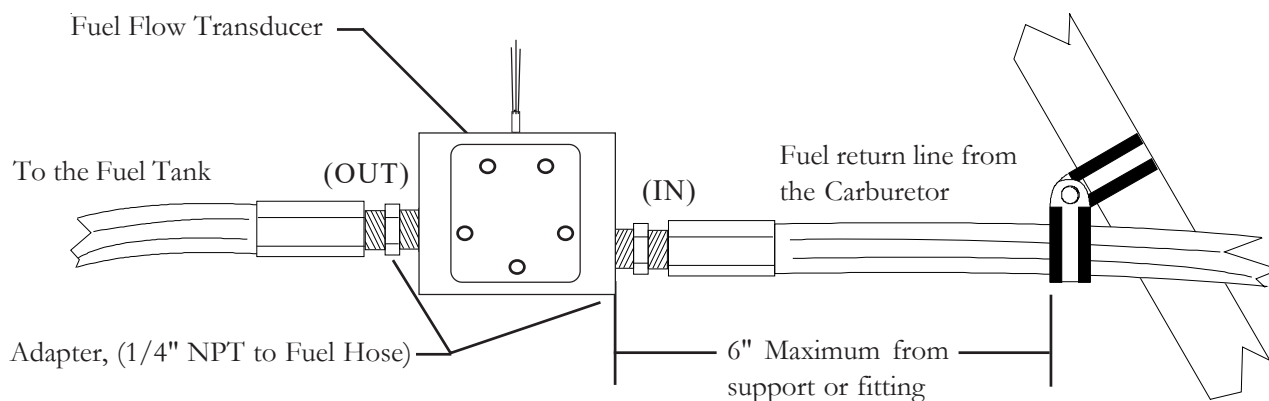

Mounting Procedure:

1. Find a convenient location within 6" of a hose support or fitting and away from any hot exhaust pipes to suspend the Fuel Flow Transducer. The hose support or fitting may be on the input or output line of the Flow Transducer and the support may be to an adjacent hose.
2. Remove the return fuel hose which goes from the Carburetor to the Fuel Tank.
3. Purchase two new hoses: one to be used from the Carburetor to the Fuel Flow Transducer and the other to be used from the Fuel Flow Transducer to the Fuel Tank. **There must be flexible hose in and out of the Transducer.** The hoses must meet TSO-C53a Type C or D FAA specifications. **The new hoses must be the same size as the current hose in the aircraft.** Source of fittings and fabricated hoses are:

Aircraft Spruce
 aircraftspruce.com
 (877) 477-7823

4. Mount the Fuel Flow Transducer in the fuel return line. **You must use the FT-90 (Gold Cube Fuel Flow Transducer on any engine over 350 H.P.** If the Transducer is mounted within 6" of an exhaust pipe, the Flow Transducer must be wrapped with Fire Sleeving.
5. **Read the Installation Instructions for important installation considerations.**

Drawn By: R.R.	Electronics International Inc.		
Approved By: R.R.	Installation of a Fuel Flow Transducer suspended in the <u>fuel return line</u> from the carburetor to the fuel tank.		
Scale: None	Note: <u>Only applicable</u> for installation on aircraft with a fuel return line from the <u>Carburetor</u> .		
Material:			
Next Assembly:			
P/N:	Date: 10/15/94	Rev: A: 7/2/02	D/N: 1015941

2.11 Install the EI P-300C Fuel Level Probes (OEM or Experimental Only):

Install the P-300C (Capacitive) Fuel Level Probes in accordance with the aircraft manufacturer's instructions.

2.12 Install the EI P-300M Fuel Level Sender:

The CGR-30x system can interface with an aircraft's existing Resistive Fuel Senders via the RFLM-4 or these resistive fuel level senders can be replaced with the P-300M (Magnetic Float) Fuel Level Sender. The signal produced by the P-300M Sender is a linear voltage output designed to work with the CGR-30x system.

The P-300M's float arm and travel must match the aircraft's existing sender's arm and travel. Due to the lack of information from aircraft manufacturers, the existing sender may need to be removed from the aircraft and sent to Electronics International. In this way the P-300M's float arm and travel can be matched with the aircraft's existing sender. Contact Electronics International for further information. The P-300M has the same bolt pattern as resistive fuel senders. The P-300M requires three wires to interface to the EDC (resistive senders only use one wire).

Note: Calibrating the CGR-30x to a fuel tank can compensate for nonlinearity in the tank's shape and nonlinearity in the resistive fuel level sender. The CGR cannot correct for inconsistent or non-repeatable signals from resistive fuel level senders. Unfortunately, many older resistive fuel level senders (and in some cases, newer resistive senders) exhibit some of the following problems:

- Variation in the wiper-to-element resistance (CRV).
- Stick slip problems with bearings and wiper-to-element contact.
- Windup causing jumps in readings.
- Weak wiper tension.
- Loose or worn bearings, causing fluctuations in tension and resistance.
- Worn out wiper.
- Corroded wiper.
- Corroded or worn element.
- Build up of varnish on the wiper and element.
- Water logged floats.

If you find inconsistent or inaccurate fuel level readings (due to a defective resistive fuel level sender), you must have the sender replaced. Inaccurate readings can lead to a dangerous situation. The CGR-30x depends on the fuel level sender for accurate fuel level information. Read the "Important Notice" in the CGR Operating Instructions.

The P-300M is a float type fuel level sender that uses a magnet and pickup device to detect the float position and produce the signal for the CGR-30x system. The P-300M has no wiper or resistive element and there is no tension on the bearing surfaces. It is not subject to the many problems associated with resistive type senders. The P-300M has nothing to wear out or affect inaccurate fuel level readings. Also, the P-300M does not require electricity to flow through an element and wiper saturated in fuel, as is the case with resistive senders.

2.13 Install the Resistive Fuel Level Module (RFLM-4-X):


The RFLM-4 is a Resistive Fuel Level Module that provides pull-up resistors for 4 resistive fuel level senders. This module is required to interface an EDC Resistive Fuel Level Input to a Resistive Fuel Sender.

Warning: DO NOT connect an RFLM-4 to the output of an existing aircraft's Capacitive System, damage to the system may occur. The small output voltage of an existing capacitive system currently drives a fuel level gauge. This output wire should be routed to one of the resistive fuel level inputs on the EDC with NO connection to an RFLM unit.

There are two RFLM-4 modules available. The RFLM-4-12V operates on a 12-volt electrical system and the RFLM-4-24V operates on a 24-volt electrical system. The appropriate model must be used.

Mount the RFLM-4-X to the inside firewall or to an equipment bay under the aircraft instrument panel. Use the holes in the bottom plate to mount the unit. Only two mounting holes are required.

Note: For each Fuel Level Channel on the EDC you can use either the Resistive Input or the Capacitive Input, but not both.

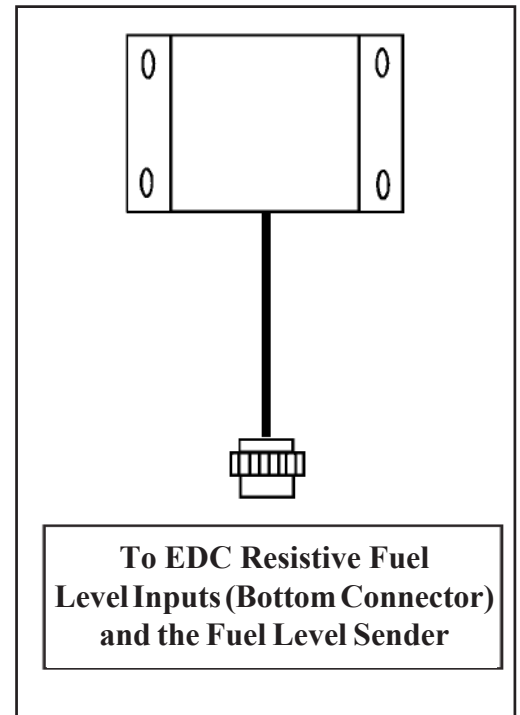


2.14 Install the Intensity Control Pot CP-1A (Optional):

The backlight display intensity of the CGR is controlled by an external source. The input voltage levels for a bright and dim setting on the CGR-30x are programmable. Your existing reostat can provide this signal or you may purchase the CP-1A.

The CP-1A Intensity Control Pot will provide the proper voltage for one or many CGR-30x units and for the external Master Warning and Caution lights associated with each instrument. To install the CP-1A perform the following:

- Find an appropriate mounting location on the aircraft instrument panel for the CP-1A Control Pot. The Pot will require a 2" clearance behind the aircraft instrument panel.
- Mark the aircraft instrument panel and drill a 1/4" hole for the Pot.
- Mount the Pot from behind the aircraft instrument panel and install the knob.

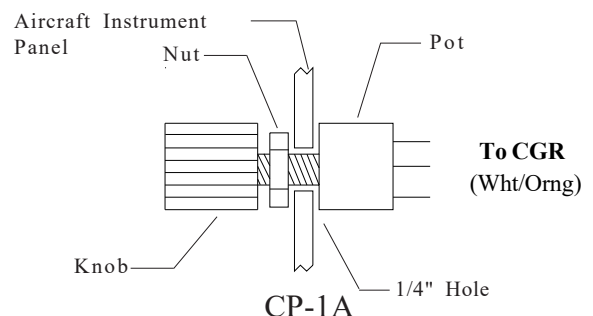


2.15 Install the Master Warning (red) and Caution (yellow) Lights:

Install the Warning and Caution Lights within the pilot's primary field of view.


- A. Locate the Red (AL-1R), Yellow (AL-1Y) lights and the Mounting Plate in the kit. Find an appropriate mounting location within 12" of the pilot's visual centerline. The lights will require 3/4" clearance behind the aircraft instrument panel.
- B. If the aircraft currently has Caution and Warning Lights for an existing CGR-30x or you are installing the CGR-30x, install the Mounting Plates as follows:
 - 1) If the two instruments are mounted side-by-side, install the Mounting Plates horizontally, side-by-side with the left Plate annunciating the left instrument or mount the Plates vertically, top-to-bottom with the top Plate annunciating the left instrument.
 - 2) If the two instruments are mounted top-to-bottom, install the Mounting Plates vertically, top-to-bottom with the top Plate annunciating the top instrument or mount the Plates horizontally, side-by-side with the left Plate annunciating the top instrument.
- C. The CGR-30x remote lights and mounting plate must be installed in a location where the placard will be readable in all lighting conditions. Installing the annunciators near an exiting lighting source or installing a post light are acceptable methods of compliance. Other methods may also be acceptable.
- D. Mark the aircraft instrument panel (using the mounting plate as a guide) and drill a 5/16" hole for each light. Install the Red Warning Light, Yellow Caution Light and Mounting Plate in the instrument panel.

Note: If the CGR Master Warning and Caution Outputs are connected to other lights or devices, the current must be limited to 0.1 amps. The outputs pull to ground when active.

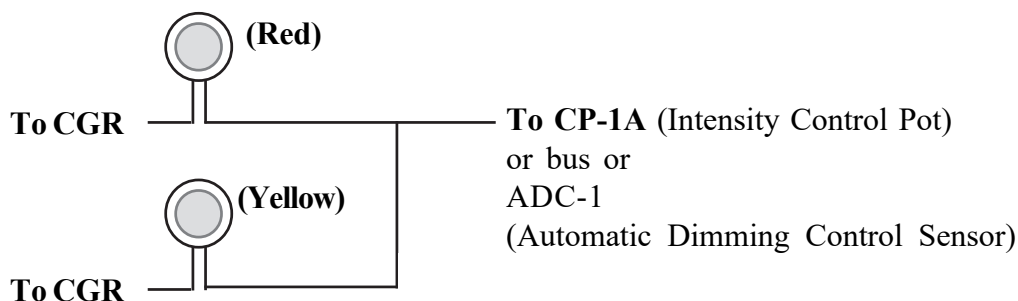

2.16 Install the Interface Circuit for a PWM Backlight System (Optional):

If a PWM backlight system will be used to control the CGR-30x screen intensity, place the following circuit in series with the CGR-30x backlight wire.

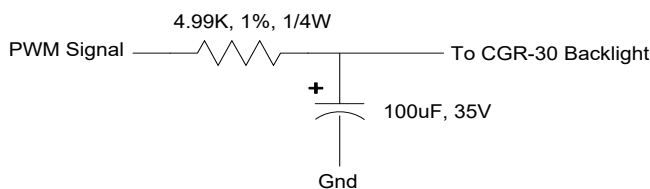

2.17 Install the USB-6A (Optional):

The CGR-30x provides a USB port to upload configuratoin data and to download flight data. The USB-6A allows the USB port to be mounted on the aircraft instrument panel. Otherwise, the port will only be available via a USB connector (dongle) located under the instrument panel. To install the USB-6A, following the instructions provided with the unit.

2.18 Install the FM-SC or AC-1 Converter (Optional):

The FAA PMA'd FM-SC and AC-1 are used to convert engine data from a FADEC unit to the CGR-30x. To install the converter following the instructions provide with the appropriate unit.

2.19 Install any Additional Modules (Optional):

If any additional modules are provided with the system, install them at this time using the instructions provide with the modules.

2.20 Install the EDC-33P-():

The EDC-33P-() (Engine Data Converter) converts all of the analog engine signals into serial data which is output to the CGR display via one wire (5V Serial). The EDC unit measures 4.5" long by 3.5" wide by 2.2" high. There are three 37-pin D-sub connectors that interface to the various probes, modules or direct connections to the aircraft.

Mount the EDC on the inside firewall under the aircraft instrument panel or in an equipment bay with the connectors pointing down. For a twin-engine aircraft the EDC can be mounted on the opposite side of the firewall of the engine or in the cabin or equipment bay with the connectors pointing down. Use the holes in the bottom plate of the EDC to mount the unit. Be sure you will have enough room to connect the three D-sub connector wire harnesses to the EDC. Note: If you run out of channels on the EDC, a second EDC may be installed and connected to the CGR.



When routing the EDC wire harnesses refer to the Top, Middle and Bottom "EDC Wiring Work Sheets" found at the back of this manual. Insure no wires obstruct the freedom of travel of any controls.

Note: If the aircraft has an existing CGR-30x installed, the EDC-33P-() will already be installed in the aircraft.

Important Information - DO NOT lace the interconnect wires to the HV Spark Plug wires, P-leads or antenna wires. Also the interconnect wires should be routed away from the radio stack.

Install the EDC Wire Harnesses and Route Wires

- 3.1 Attach the three EDC 37-pin Wire Harnesses to the EDC:**
- 3.2 Connect the EDC Harness to the Temperature Probes:**
- 3.3 Connect the EDC Harness to the Pressure Transducers:**
- 3.4 Connect the EDC Harness to the Shunt:**
- 3.5 Connect the EDC Harness to the Fuel Flow Transducer:**
- 3.6 Connect the EDC Harness to the Existing Capacitive Fuel Level System:**
- 3.7 Connect the RFLM-4-x Harness to the EDC Connector and to the Resistive Fuel Level Sensors:**
- 3.8 Connect the EDC Harness to the EI P-300C Capacitive Fuel Level Probes:**
- 3.9 Connect the EDC Harness to the EI P-300M Magnetic Fuel Level Senders:**
- 3.10 Connect the EDC Harness (Volts Measurement Pin) to the Bus:**
- 3.11 Connect the EDC Harness to the RPM Signals:**
- 3.12 Set up the EDC for a 4 or 6-Cylinder Engine:**
- 3.13 Connect the EDC Harness to Power and Ground:**
- 3.14 Route the EDC 5V-Serial Wire to the CGR Connector:**

Blank Page


3.1 Attach the three EDC 37-pin Wire Harnesses to the EDC:

Secure the connectors using the supplied mounting screws.





3.2 Connect the EDC Harness to the Temperature Probes:

Route each of the temperature cables in the EDC harness to the appropriate temperature install the appropriate connectors (see the “Working with Connectors” section of this manual for more information) and connect to the temperature probe. When connecting to a temperature probe, leave some slack in the cable exiting the probe to prevent damage to the probe over time.

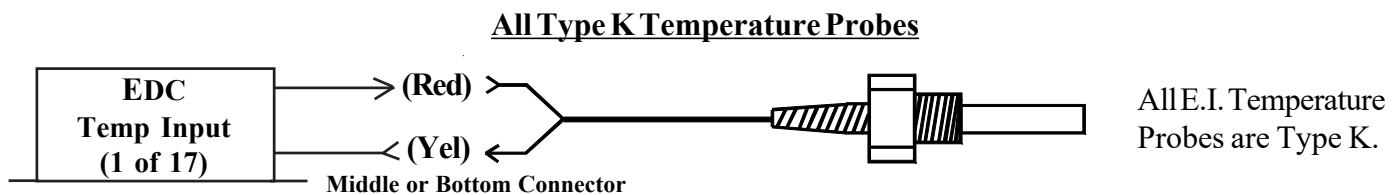

3.3 Connect the EDC Harness to the Pressure Transducers:

Route each of the pressure cables in the EDC harness to the appropriate pressure transducers. Cut the wires to length, install the appropriate connectors (see the “Working with Connectors” section of this manual for more information) and connect to the pressure transducer. When connecting to a pressure transducer, leave some slack in the cable exiting the transducer to prevent future damage to the transducer

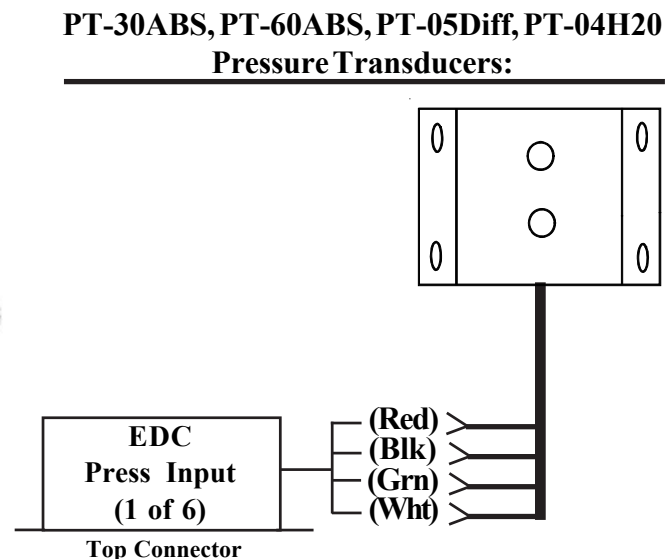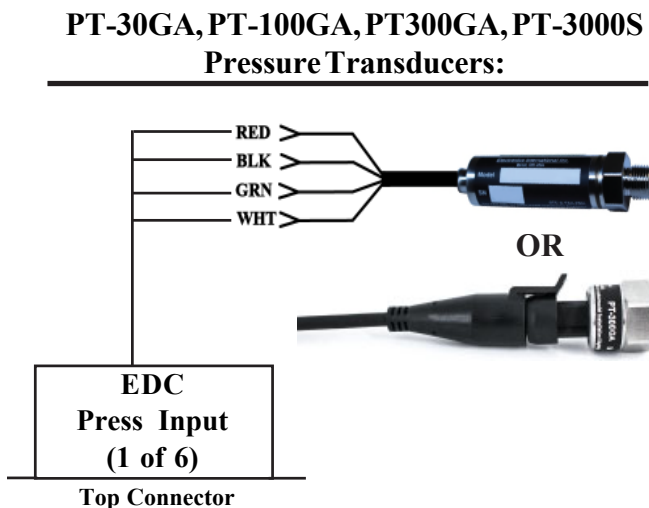


3.4 Connect the EDC Harness to the Shunt:

Route the EDC Amps wires to the Shunt. The way the Shunt is installed in the aircraft determines which lug will be used as "+" (see “Installing the Shunt” in the previous section of this manual). The EDC +Amp Input wire (green) should be connected to the small lug on the "+" side of the Shunt. The EDC -Amp Input wire (white) should be connected to the small lug on the "-" side of the Shunt.

3.5 Connect the EDC Harness to the Fuel Flow Transducer:

Route the fuel flow cable in the EDC harness to the Fuel Flow Transducer. Cut the wires to length, install the appropriate connectors (see the “Working with Connectors” section of this manual for more information) and connect to the fuel flow transducer. When connecting to the Fuel Flow Transducer, leave some slack in the cable exiting the transducer to prevent future damage to the transducer.


If the flow transducer is hard mounted to a bracket, **DO NOT connect the Black Gound Wire** on the flow transducer. The bracket will provide the necessary ground to the transducer.

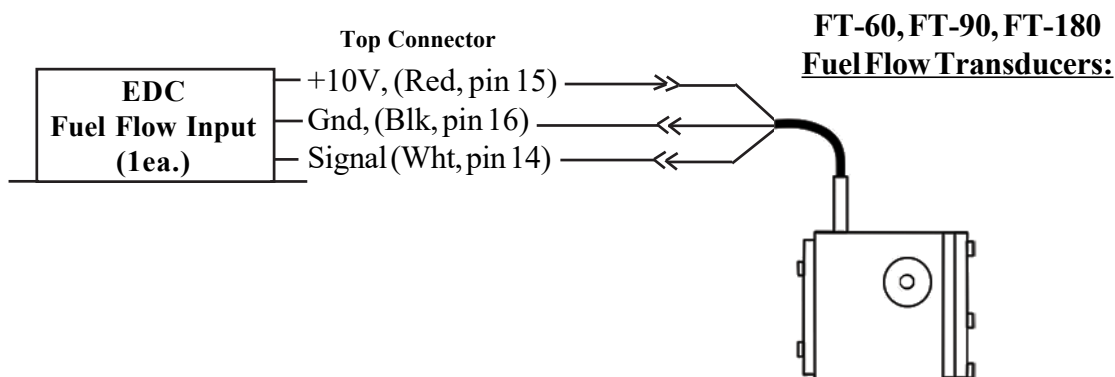

3.6 Connect the EDC Harness to the Existing Capacitive Fuel Level System:


The output signal of a capacitive fuel level system (on a certified aircraft) will have a wire connected from the capacitive system to the fuel level gauge. The signal on this wire will be 0 to approx 150mV DC. The other side of the gauge will be grounded. Re-route the signal wire (currently connected to the fuel level gauge) to one of the resistive inputs on the bottom connector of the EDC. **DO NOT connect an RFLM unit into this system as damage to the system may occur.** The current fuel level gauge must be removed from the system.

A 332-ohm resistor should be connected from the signal wire to ground. For a CGR-30x STC'd system, this resistor is integrated into the wire harness supplied with the system.

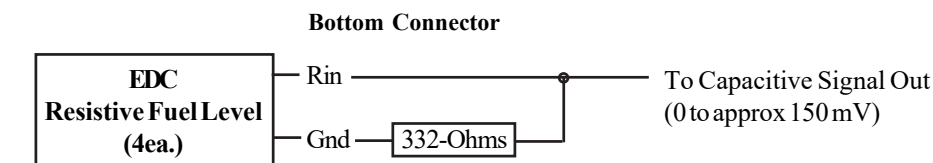

3.7 Connect the RFLM-4-x Harness to the EDC Connector and to the Resistive Fuel Level Sensors:


DO NOT connect the RFLM into a capacitive system as damage may occur. Route the appropriate resistive fuel level input wires (for the number of tanks to be monitored) in the RFLM-4-x harness to the EDC Bottom Connector. Plug the wires into the appropriate resistive fuel level channels. The excessive wire can be cut and spliced, bundled and tie-wrapped up or cut to length and new D-Sub pin installed (see the “Working with Connectors” section of this manual for more information). Route and connect the corresponding wires in the RFLM-4-x wire harness to the appropriate fuel tank

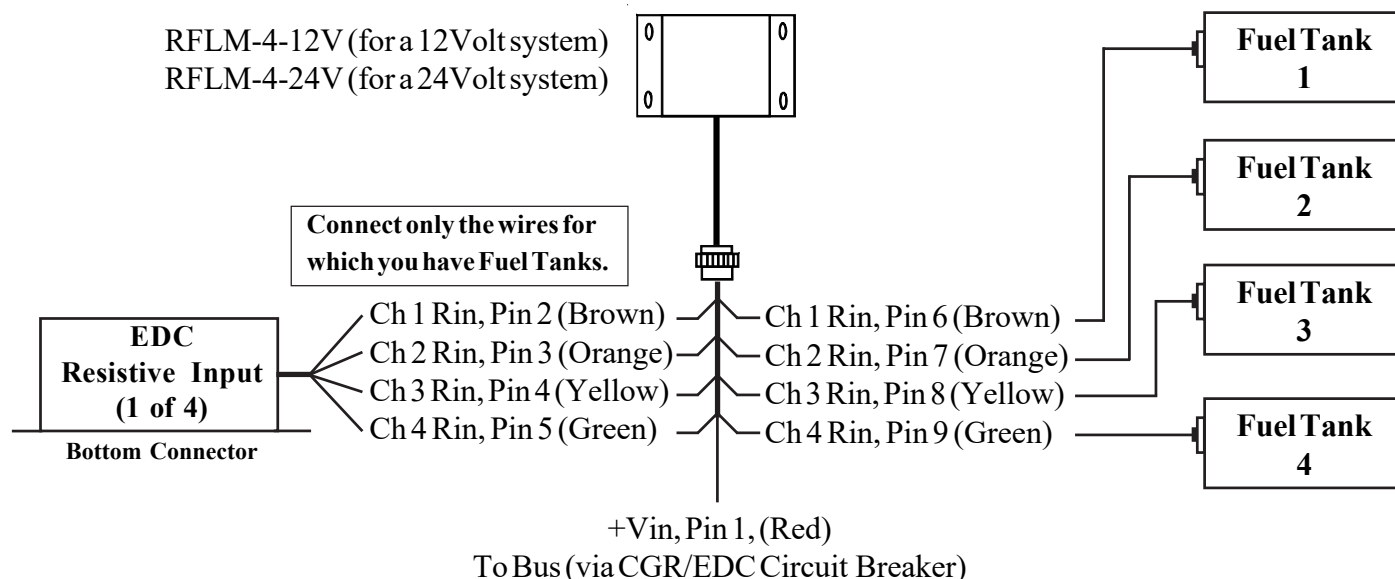

sensors. Route the red wire (in pin 1 of the RFLM-4-x connector) to the aircraft bus via the CGR/EDC 5-amp circuit breaker.

3.8 Connect the EDC Harness to the EI P-300C Capacitive Fuel Level Probes:

Route the appropriate capacitive fuel level wires (for the number of tanks to be monitored) in the EDC harnesses to the

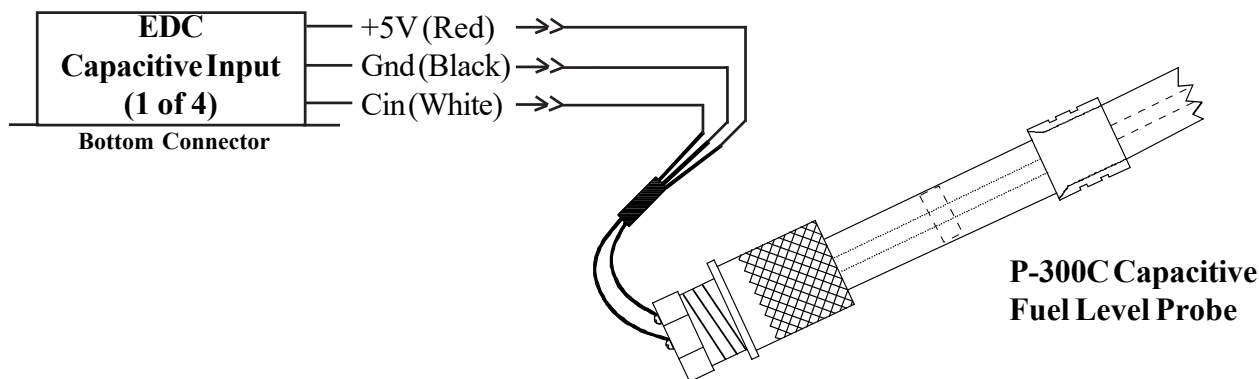


capacitive fuel level probes. Cut the wires to length, install the appropriate connectors (see the “Working with Connectors” section of this manual for more information) and connect to the capacitive fuel level probe.

Note: The capacitive fuel level channels are shared with the resistive channels. A single capacitive and resistive channel cannot be used simultaneously.

3.9 Connect the EDC Harness to the EI P-300M Magnetic Fuel Level Senders:

Route the appropriate fuel level wires (for the number of tanks to be monitored) in the EDC harnesses to the P-300M magnetic fuel level senders. Cut the wires to length, install the appropriate connectors and connect to the P-300M fuel level sender.

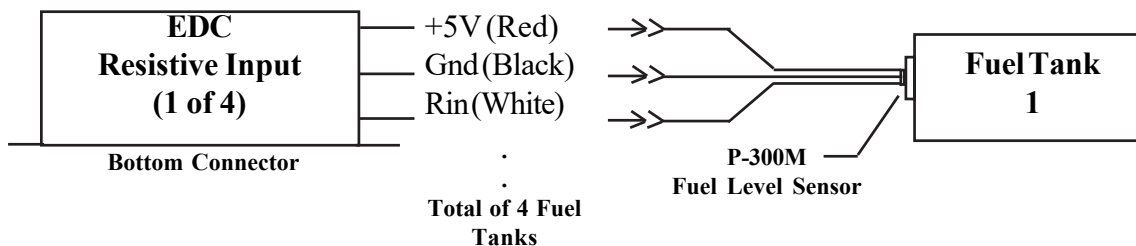

3.10 Connect the EDC Harness (Volts Measurement Pin) to the Bus:


Pin 35 of the EDC top connector monitors bus voltage. Connect this pin to the bus to be monitored.

3.11 Connect the EDC Harness to the RPM Signals:

If the EDC RPM Ch 1 and Ch 2 Inputs are to be connected to a Magneto, Ignition Coil or CDI Ignition System, connect the Ring Terminal Isolators (found in the RPM Isolator packet) to the P-leads on the back of the Mag Switch. Connect the EDC RPM Ch 1 and Ch 2 wires (White/Brown and White/Orange) to the RPM Isolators.

If the EDC RPM Ch 1 and Ch 2 Inputs are to be connected to an electronic ignition system, connect the EDC RPM Ch 1 and Ch 2 wires (White/Brown and White/Orange) directly to the electronic ignition system RPM output (do not use any isolators). Without isolators the EDC RPM Ch 1 and Ch 2 Inputs have a 3-volt trigger level and will accommodate 0 to 5-volt, 0 to 12-volt or 0 to 24-volt signals. If only one RPM signal is available, connect only one of the EDC RPM channels.

WARNING: Connecting an EDC RPM input directly to a magneto without an Isolator will damage the EDC. Be sure there is an Isolator in each RPM input lead connected to a magneto, ignition coil or CDI ignition.

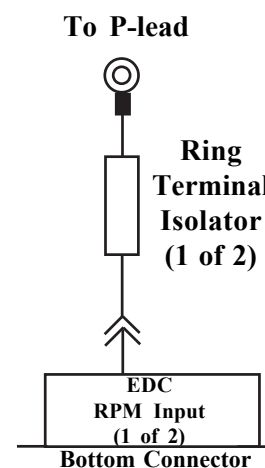

3.12 Set up the EDC for a 4 or 6-Cylinder Engine:

If the EDC-33P-() is to be used on a 6-cylinder engine, strap Pin 28 to Pin 27 on the EDC Bottom Connector. Leave these pins open for a 4-cylinder engine. This strap may already be installed or can be found in the kit.

3.13 Connect the EDC Harness to Power and Ground:


Route the power wire (Top Connector, pin 37, Red Wire) to the CGR/EDC 5-amp Circuit Breaker. Route the ground wire (Top Connector, pin 19, Black Wire) to the aircraft ground.

WARNING: The power wire is RED and is connected to pin 37 on the EDC Top Connector. If aircraft power is connected to any pin on the EDC other than pin 37, damage to the EDC and any connected transducers may occur. Insure power is provided on pin 37 of the EDC Top Connector before attaching the connector.

3.14 Route the EDC 5V-Serial Wire to the CGR Connector:

Route the EDC 5V-Serial white/green wire to the CGR connector. You may need to splice into this wire. This wire will be connected to the CGR 5V-Serial input in a later step. If a second EDC is installed, see the Appendix for connection information.

When routing the CGR wire harness refer to the "CGR-30x 25-pin D-Sub Connector Wiring Diagram." Insure no wires obstruct the freedom of travel of any controls.

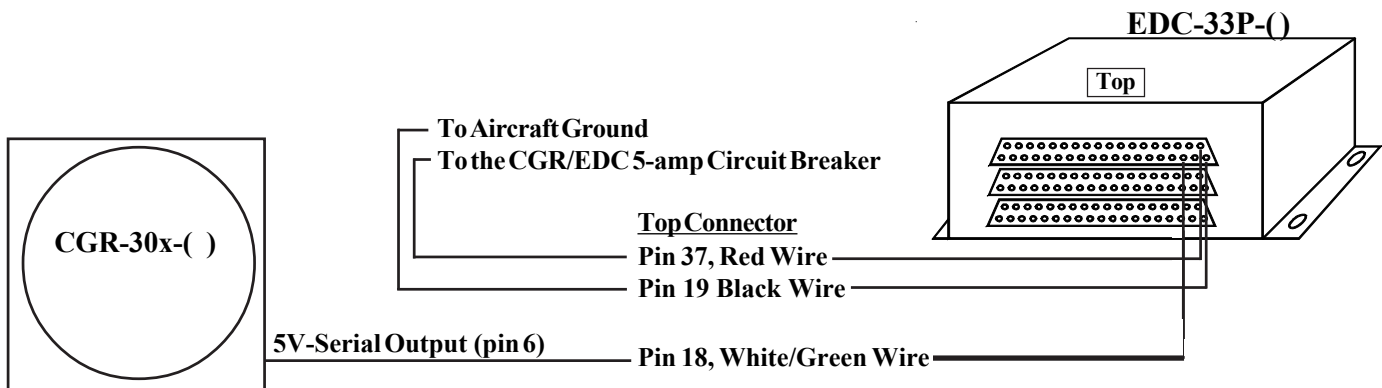

Blank Page

Install the CGR Wire Harness and Route the Wires

4.1 Attach the CGR 25-pin D-sub Connector to the CGR:

4.2 Connect the EDC 5V-Serial Output Wire to the CGR 5V-Serial Input Wire:

4.3 Connect the CGR Harness to the Master Warning and Caution Lights:

4.4 Connect the CGR Harness to the Audio Panel (OEM Only):

4.5 Connect the CGR Harness to Power and Ground:

4.6 Connect the CGR Harness to the CO-Guardian CO Detector:

Blank Page

4.1 Attach the CGR D-sub Connector to the CGR:


Secure the connector using the supplied mounting screws.

4.2 Connect the EDC 5V-Serial Output Wire to the CGR 5V-Serial Input Wire:

Route the EDC 5V-Serial output wire to the back of the CGR Display, cut the wires to length and splice them to the appropriate CGR 5V-Serial input wire.

4.3 Connect the Master Warning and Caution Circuits:

If the Warning and Caution Lights are installed, route the CGR Master Warning Out wire (White/Yellow, Pin 10) to the Master Warning (Red) Light (AL-1R) White wire, cut the wires to length, install the appropriate connector and connect to the AL-1R.

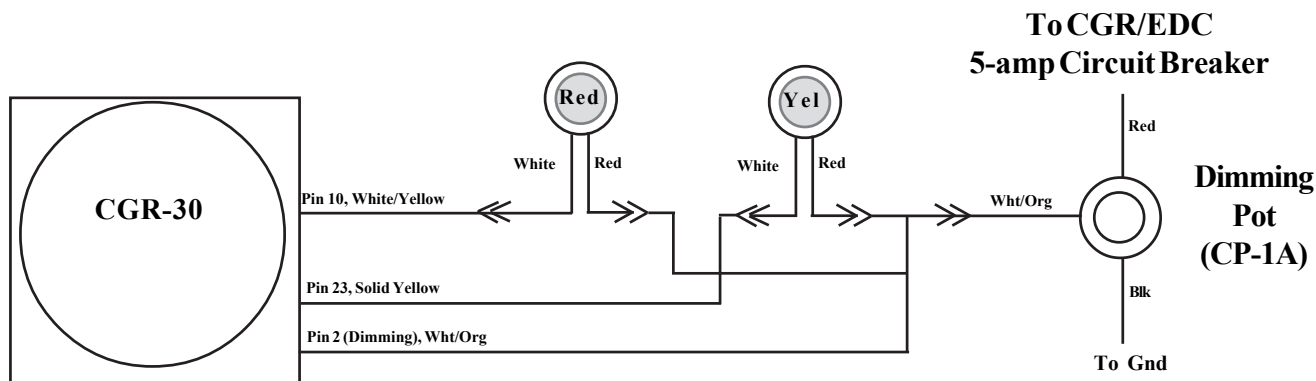


Route the CGR Master Caution Out wire (Yellow, Pin 23) to the Master Caution (Yellow) Light (AL-1Y) White wire, cut the wires to length, install the appropriate connector and connect to the AL-1Y.

Route and connect the CP-1A Backlight Control Pot to the CGR-30x and to the Master Caution and Warning lights.

Route the CP-1A Red wire to the CGR breaker. Route the Black wire to ground.

4.4 Connect the CGR Harness to Power and Ground:

Route the power wire (red) to the main bus via a 5-amp Circuit Breaker. Route the ground wire (black) to the aircraft ground.

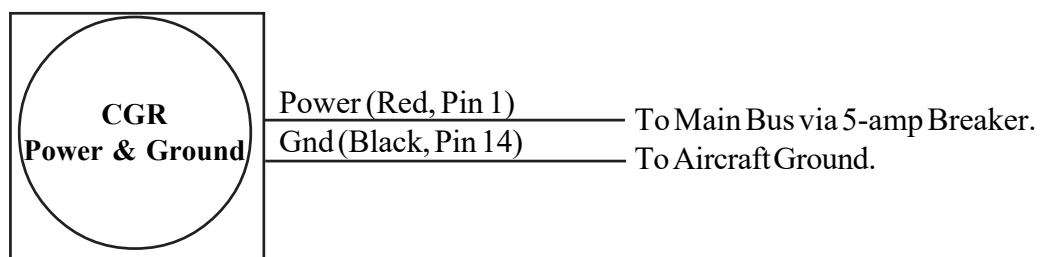

4.5 Connect the CGR Harness to the CO-Guardian CO Detector:

If a CO detector was installed, connect the RS232 output from the Remote Mounted 353-201 (experimental only) or 452-201-011 (certified) CO Detector to Pin 4 (Port 4 In) on the CGR. Refer to CO-Guardian's installation instructions for further information on the CO Detector.

WARNING: The power wire is RED and is connected to pin 1 on the CGR. If aircraft power is connected to any pin on the CGR other than pin 1, damage to the CGR and any connected hardware may occur. Insure power is provided on pin 1 of the CGR before attaching the connector.

Mandatory System Setup and Checkout

- 5.1 Power-On Checkout:**
- 5.2 Perform all Steps listed in the "CGR-30x Setup Checklist":**
- 5.3 Ground Run Checkout:**
- 5.4 First Flight Checkout:**
- 5.5 Read the "Warranty/Agreement" and the "Important Notice":**

Blank Page

5.1 Power-On Checkout:

Turn the aircraft master switch on. The CGR will power up and perform a system test. After approximately 15 seconds the CGR will display the "Main" screen with a Warning Message. Press any button to continue. If you have a problem with any of the following steps, see the Troubleshooting section of this manual. Perform only the checks applicable to your configuration.

- A. Check the RPM for a reading of 000.
- B. Check the M.P. for the following reading:
Current BARO less 0.1"Hg for every 100 feet elevation above sea level.
- C. Check Fuel Flow for a reading of 00.0.
- D. Check Oil Pressure for a reading of 00.
- E. Check Oil Temp to read near ambient temperature.
- F. Check Volts for proper reading.
- G. Check Amps for proper reading.
- H. Check OAT to read ambient temperature.
- I. Check all other functions on the Main and System screen to operate properly.

Note: Fuel Levels may not read properly until they have been calibrated.

5.2 Perform all Steps listed in the "CGR-30x Installation Checklist":

A CGR-30x Installation Checklist is provided on blue tag board. Each step listed in this checklist must be completed before continuing with this installation.

5.3 Ground Run Checkout:

Start the aircraft engine. Check that the values for each function displayed on the CGR are proper for "engine on" operation. Any problem with a specific function will be associated with a probe, cable or interconnect cable between the probe and the EDC for that function. If you have a problem with any of the following steps, see the Troubleshooting section of this manual. Perform only the checks applicable to your configuration.

- A. Check the RPM.
- B. Check the M.P.
- C. Check Fuel Flow.
- D. Check Oil Pressure.
- E. Check Oil Temperature.
- F. Check Fuel Level for each Tank.
- G. Check Volts.
- H. Check Amps.
- I. Check OAT.
- J. Check all Annunciators.
- K. Check all other functions on the Main and Secondary screens.

Turn the engine off. Inspect the entire system to be certain there is no interference with controls. Also, check for loose fittings, proper connections, clamps, probes, and inspect for leaks, chafing, obstructions, heat damage and anything that may cause unsafe flight. **Check that all fittings are tight.** Loose fittings can cause engine and/or aircraft damage and possibly personal injury.

5.4 First Flight Checkout:

Prepare the aircraft for flight. Fly the aircraft in the pattern. Check for proper operation of each function displayed on the CGR. Land the aircraft and perform the following checks as soon as possible:

- A. Check all fittings, hoses and transducers for leaks.
- B. Check all fittings, hoses, wires, system components and hardware to be secure and not chaffing.
- C. Check for interference to any controls.
- D. Check for any unsafe condition.

Do not release the aircraft for normal operation until all steps in this document have been performed and the aircraft is safe to fly.

5.5 Read the "Warranty/Agreement" and the "Important Notice":

Require the pilot to read the "Warranty/Agreement" and the "Important Notice" located in the front of the "Operating Instructions" before releasing the aircraft for flight.

Installation Data

6.1 Instructions for Continued Airworthiness (ICA):

6.2 Airworthiness Limitations:

6.3 Installing a D-sub Pin onto a TC or Tin Copper Wire:

CGR-30x Work Sheet, 25-pin D-sub Connector

EDC Wiring Work Sheet, Top Connector (Back View)

EDC Wiring Work Sheet, Middle Connector (Back View)

EDC Wiring Work Sheet, Middle Connector (Back View)

EDC Template

Blank Page

6.1 Instructions for Continued Airworthiness (ICA):

The Instructions for Continued Airworthiness (ICA) are located in the Electronics International document 06211301 "CGR-30x Instructions for Continued Airworthiness". If you need an additional copy of the CGR-30x ICA please visit: www.iFlyEi.com or call (541) 318-6060.

6.2 Airworthiness Limitations:

The Airworthiness Limitations section is FAA approved and specifies maintenance required under CFR 43.16 and 91.403 of the Code of Federal Aviation Regulations unless an alternative program has been FAA approved.

Operational:

The conditions and tests required for TSO approval of the CGR-30 are minimum performance standards. It is the responsibility of those installing this system either on or within a specific type or class of aircraft to determine that the aircraft installation conditions are within the TSO standards. TSO articles must have separate approval for installation in an aircraft. The CGR-30x may be installed only if performed under 14 CFR part 43 or the applicable airworthiness requirements. There are no further specific operating limitations of this system.


Installation:

The CGR-30x system is to be installed in accordance with the current CGR-30x Installation Instructions, AC 43.13 and any other appropriate FAA approved practices or guidelines. These instructions along with FAA approved material insure the system will meet the requirements of the applicable TSOs once installed in an aircraft. There are no further specific installation limitations of this system.

6.3 Installing a D-sub Pin onto a TC or Tin Copper Wire:

D-sub pins are used in the D-sub connectors found on the EDC and the CGR. Most of these pins have already been installed on the appropriate wires and inserted into the proper connector. Installing a D-sub pin requires a D-sub crimp tool. Most electronic stores carry a reasonably priced D-sub crimp tool that will perform a good crimp but a 4 to 5 pound pull test must be performed. To install a D-sub pin onto a 20 ga. Tin Copper Wire, perform the following steps:


- A. Strip the insulation back 1/8." Be careful not to nick the wire.
- B. Insert the pin into the 24 ga. D-sub Pin Crimper. The crimpers have two cavities; the smaller one is used to crimp the bare wire and the slightly larger one is used to crimp around the insulation. Check that the pin is inserted into the crimpers properly. Also, the ears on the pin must be facing into the center of the crimp tool cavity to produce a good crimp. If the pin rotates even a little during crimping, the connection will be unreliable.

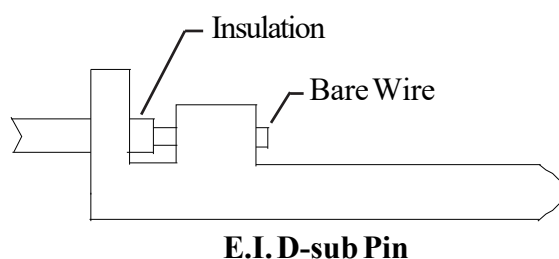

C. Insert the wire into the pin. Check that the insulation is in the strain relief crimp area but not in the bare wire crimp area. Crimp the pin onto the wire. **A good crimp is very important. Poor crimps will cause jumpy readings and are the biggest source of problems.**

D. Pull Test: Pull (approximately 4 to 5 pounds) on the wire near the connector with one hand while holding the connector with the other hand. If the wire pulls out of the connector or feels loose, you must start over using a new connector.

E. A well soldered connection at the crimp can be reliable. Soldering a TC wire requires a lot of heat to produce a good solder connection. Also, when soldering a TC wire each wire should be scraped with a knife to expose fresh metal just before crimping and applying solder. Fluxing the TC wire can also help. Do not use acid core solder or acid flux, this will cause conductive paths between the connectors.

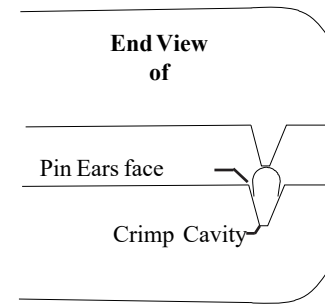


CGR-30C

CGR Work Sheet DB25 Connector

Aircraft ID:

SAMPLE

DB-25 Back View, Wire Side



DB-25 (421-0331-00)

Pin (421-0301-00)

CGR-30C

Power In	1
Gnd	14
Port 1 RS232 RX	6
Port 1 RS232 TX	18
Port 2 RS232 RX	7
Port 2 RS232 TX	19
Port 3 RS232 RX	3
Port 3 RS232 TX	15
Gnd	5
Port 4 RS232 RX	4
Port 4 RS232 TX	16
Gnd	17
USB Interface	
USB +5V	21
USB -	9
USB +	22
USB Gnd	8
Master Warning Out	10
Master Caution Out	23
Gnd	20
Back Light Control In	2
Voice Control Ack	12
Voice Control +3.3V	13
Voice Control Off	25
Voice Warning Out +	11
Voice Warning Out -	24

FOR REFERENCE ONLY

AIRCRAFT SPECIFIC WORKSHEET
IS PROVIDED IN YOUR KIT

Electronics International inc.

EDC-33P

EDC Work Sheet Top Connector


Aircraft ID:

SAMPLE

Notes:

***1 Unused Pressure Channel
Inputs Must Be Grounded.**

DB-37 Back View, Wire Side



**DB-37 (421-0337-00)
Pin (421-0301-00)**

EDC-33P

	Power	37
	Gnd	19
	5V Serial Out	18
	No Connect	36
	Volts	35
	+ Amps	32
	- Amps	33
Fuel Flow	+10V	15
	Gnd	16
	Signal In	14
Pressure Ch1	+5V	20
	Gnd	21
	+ Signal In	3
	- Signal In	2
	Extra Gnd	1
Pressure Ch2	+5V	22
	Gnd	23
	+ Signal In	5
	- Signal In	4
Pressure Ch3	+5V	24
	Gnd	25
	+ Signal In	7
	- Signal In	6
Pressure Ch4	+5V	26
	Gnd	27
	+ Signal In	9
	- Signal In	8
Pressure Ch5	+5V	28
	Gnd	29
	+ Signal In	11
	- Signal In	10
Pressure Ch6	+5V	30
	Gnd	31
	+ Signal In	13
	- Signal In	12
	Do Not Use	17
	Do Not Use	34

FOR REFERENCE ONLY

AIRCRAFT SPECIFIC WORKSHEET
IS PROVIDED IN YOUR KIT

UNUSED PRESSURE INPUTS MUST BE
GROUNDED

Electronics International inc.

EDC Work Sheet Middle Connector

Aircraft ID:

SAMPLE**Notes:**

*1 Unused Pressure Channel
Inputs Must Be Grounded.

-- Extra Gnds maybe used
for shields.

-- Unused Temp Channels
may be used for annunciators.

DB-37 Back View, Wire Side



DB-37 (421-0337-00)
Pin (421-0301-00)

EDC-33P

	Extra Gnd	1
	+ In (Yel)	2
Temp Ch 1	- In (Red)	20
	+ In (Yel)	3
Temp Ch 2	- In (Red)	21
	+ In (Yel)	4
Temp Ch 3	- In (Red)	22
	+ In (Yel)	5
Temp Ch 4	- In (Red)	23
	+ In (Yel)	6
Temp Ch 5	- In (Red)	24
	+ In (Yel)	7
Temp Ch 6	- In (Red)	25
	+ In (Yel)	8
Temp Ch 7	- In (Red)	26
	+ In (Yel)	9
Temp Ch 8 (Best for OAT)	- In (Red)	27
	Temp Comp + In	10
	Gnd	28
	Extra Gnd	11
	Extra Gnd	12
	+ In (Yel)	13
Temp Ch 9	- In (Red)	31
	Extra Gnd	29
	Extra Gnd	30
	+ In (Yel)	14
Temp Ch 10	- In (Red)	32
	+ In (Yel)	15
Temp Ch 11	- In (Red)	33
	+ In (Yel)	16
Temp Ch 12	- In (Red)	34
	+ In (Yel)	17
Temp Ch 13	- In (Red)	35
	+ In (Yel)	18
Temp Ch 14	- In (Red)	36
	+ In (Yel)	19
Temp Ch 15	- In (Red)	37

FOR REFERENCE ONLY

AIRCRAFT SPECIFIC WORKSHEET
IS PROVIDED IN YOUR KIT

UNUSED PRESSURE INPUTS MUST BE
GROUNDED


EDC Work Sheet

Bottom Connector


Aircraft ID:

SAMPLE**Notes:**

- *1 Unused Pressure Channel Inputs Must Be Grounded.
- Extra Gnds maybe used for shelds.
- Unused Res Fuel Level Ch's may be used for annunciators.

DB-37 Back View, Wire Side

DB-37 (421-0337-00)
Pin (421-0301-00)

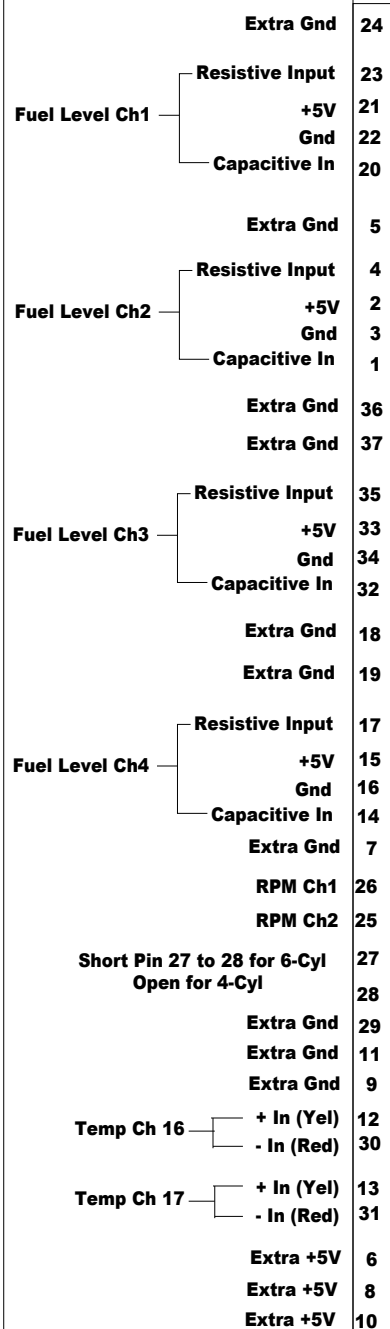EDC-33P



FOR REFERENCE ONLY

AIRCRAFT SPECIFIC WORKSHEET
IS PROVIDED IN YOUR KIT

UNUSED PRESSURE INPUTS MUST BE
GROUNDED

EDC Template

0303071

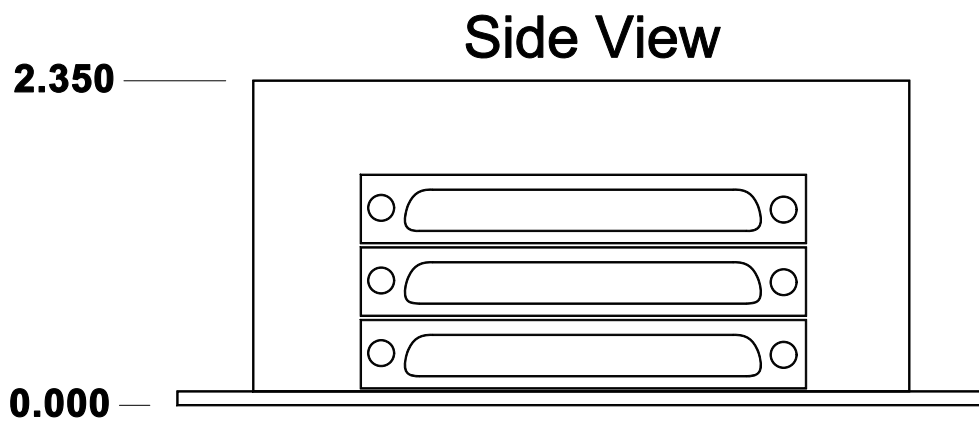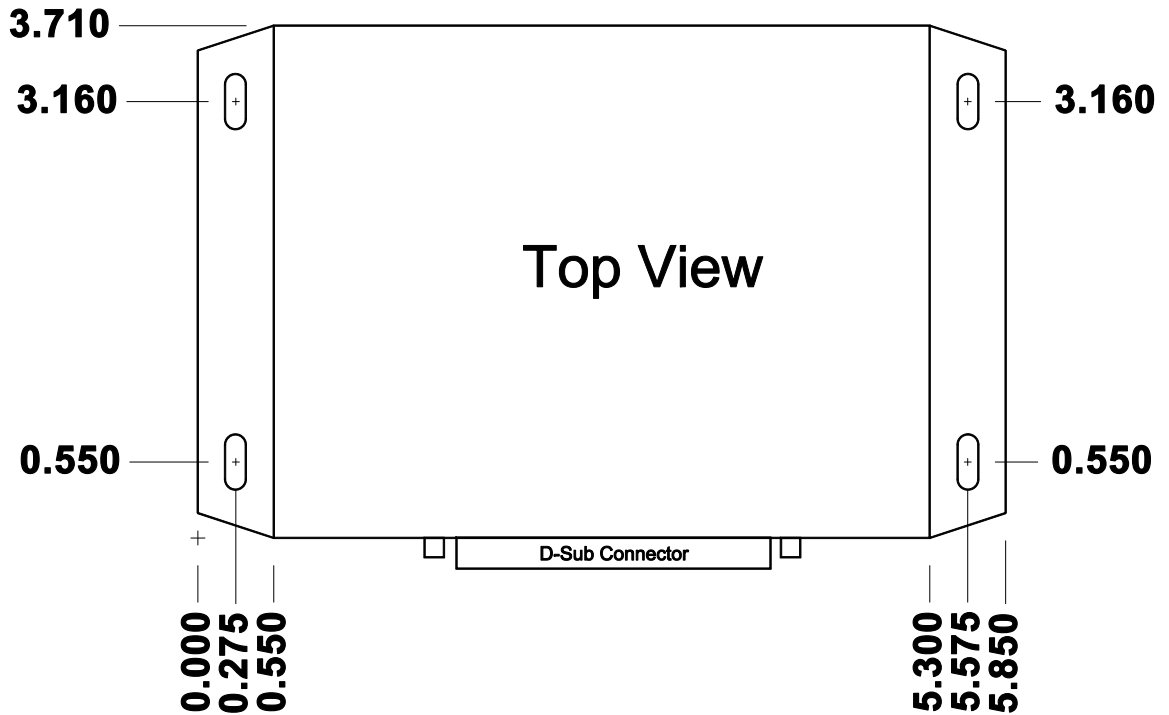

Blank Page

Troubleshooting

7.1 CGR or EDC Problem:

7.2 Pressure Problem with one Function:

7.3 Temperature Problem on all Channels:

7.4 Temperature Problem with one Function:

7.5 RPM Problem:

7.6 Fuel Flow Problem:

7.7 Amp Problem:

7.8 Resistive Fuel Level Problem:

7.9 Capacitive Fuel Level Problem:

7.10 Voltage Problem:

Blank Page

Troubleshooting

Troubleshooting the CGR system can be relatively simple. First the CGR must be powered-up. This requires only a power and ground connection to the CGR. Next the EDC needs to be powered-up and communicating with the CGR. Power and ground are supplied to the EDC on two wires and the EDC communicates with the CGR on one 5V-Serial wire. A "COM" error will be displayed if the EDC is not communicating with the CGR.

The rest of the system is made up of individual functions performing independently of each other. A problem with a pressure channel will most likely be found in the connection to the transducer, the wire from the transducer to the EDC or the EDC connection. This same scenario is true for all the functions. Rarely is there any problem with the EDC or CGR. In some cases the problem can be in the setup programming of the CGR.

7.1 CGR or EDC Problem:

The CGR and EDC require power and ground to operate. The EDC also requires one 5V-Serial wire to communicate with the CGR. The EDC also supplies power to the Fuel Flow, Fuel Level, and Pressure Transducers. If these power wires become shorted, the EDC operation will be affected.

Symptom: The CGR does not power up.

1. Problem: The Power or Ground wire is open or not connected properly.

a) Action: Measure the voltage on the power and ground wires. Ohm the ground wire to ground. Look for a short.

Symptom: "COM" is displayed for the digital value for most functions. The EDC is not communicating with the CGR.

1. Problem: One of the EDC external +5 volt power supplies on the Bottom Connector is shorted to ground.

a) Action: Remove the Bottom Connector. If the COM error goes away, look for a short on one of the +5 volt wires.

2. Problem: The Power or Ground wire to the EDC is open or not connected properly.

a) Action: Measure the voltage on the appropriate EDC pins. Ohm the Black ground wire to ground.

3. Problem: The EDC +10 volt or one of the +5 volt supplies on the Top Connector is shorted to Ground.

a) Action: Measure the +10 volt and +5 volt supplies on the Top Connector. If one of the voltages is low, use an ohmmeter to find the problem. If all wires ohm properly (>100 ohm when disconnected from the EDC), the Power or Ground wire to the Top Connector may be open.

4. Problem: The 5V-Serial wire from the EDC to the CGR may be open.

a) Action: Inspect the wire. Remove the connectors from the EDC & the CGR and check for continuity.

Symptom: “REF” is displayed for the digital value for all temperature functions.

1. Problem: The Middle Connector on the EDC is loose or not connected. The Reference Diode on pins 10 and 28 of the EDC Middle Connector is damaged. Note: Pin 28 should measure 0 volts and pin 10 should measure around .6 volts.

a) Action: Inspect the EDC Middle Connector and measure the voltage on pins 10 and 28.

Symptom: “OVR” is displayed for the digital value for a function.

1. Problem: If a channel on the EDC is over ranged (>2.5 volts between the “+” and “-” inputs), an “OVR” will be displayed for that function. This can happen on a channel that is used to monitor an Annunciator, Flap or Trim function. The max input voltage for any temperature or pressure channel is +5 volts to ground. The maximum differential voltage is 2.5 volts. The VI-221 is used to drop the voltage when measuring signals that switch from ground to bus voltage.

a) Action: Measure the voltage on the EDC “+” and “-” inputs for the function with the problem.

7.2 Pressure Problem with one Function:

Pressure is measured on the aircraft with a pressure transducer. Power (+5 volts on the Red wire) and ground (Black wire) is supplied to the transducer and a differential signal (proportional to the pressure) is supplied to the EDC on the White and Green wires.

Symptom: Inaccurate, jumpy or zero reading.

1. Problem: One of the four wires from the Pressure Transducer to the EDC is open.

a) Action: Measure the voltage on each transducer wire at the Pressure Transducer. The voltage on each wire is as follows: Red wire = +5 volts, Black wire = 0 volts, Green wire = 2.5 volts and White wire = 2.5 volts.

Short the Green wire to the White wire and look for a zero pressure reading. If you do not get a zero reading, you may have an open wire.

Ohm the Black, Green and White wires at the pressure transducer to ground. The Black wire should be grounded, the Green and White wires should not.

7.3 Temperature Problem on all Channels:

Temperature is measured using a temperature probe with type K thermocouple (TC) wire. When the TC junction in the tip of the probe is heated, a small signal (approx. 23 micro volts per °F) is produced and monitored by the EDC on two extension wires. These extension wires must be made of type K TC material.

When measuring temperature with TC material an ambient reference temperature must be provided. This is done with a reference diode located on pins 10 and 28 of the EDC Middle Connector. The ambient temperature is added to the temperature measured at the TC junction.

Symptom: Inaccurate, jumpy or zero readings on all channels.

1. Problem: The Reference Diode on pins 10 and 28 of the EDC Middle Connector is damaged.
 - a) Action: Measure the voltage on the Reference Diode. Pin 28 = 0 volts and pin 10 = approx. 0.5 volts.
2. Problem: One of the temperature input channels is over voltaged. This can happen on a channel that is used to monitor an Annunciator, Flap or Trim function. The max input voltage for any temperature or pressure channel is +5 volts. The VI-221 is used to drop the voltage when measuring signals that switch from ground to bus voltage.
 - a) Action: Measure the voltage on each of the temperature channels.

7.4 Temperature Problem with one Function:

Temperature is measured on the aircraft using a temperature probe with type K thermocouple (TC) wire. When the TC junction in the tip of the probe is heated, a small signal (approx. 23 micro volts per 'F) is produced and monitored by the EDC on two extension wires. These extension wires must be made of type K TC material.

When measuring temperature with TC material an ambient reference temperature must be provided. This is done with a reference diode located on pins 10 and 28 of the EDC Middle Connector. The ambient temperature is added to the temperature measured at the TC junction.

Symptom: Inaccurate, jumpy or zero reading.

1. Problem: One of the two wires from the Temperature Probe to the EDC is open or shorted to ground.
 - a) Action: Remove the extension cable from the probe. Ohm both wires to ground. Each wire should measure 12.1K ohms to ground.
2. Problem: The temperature probe has a problem.
 - a) Action: Ohm between the two leads of the temperature probe. You should get a short (<10 ohms).

Ohm one lead of the probe to ground. You should get an open (> 100K ohms).

7.5 RPM Problem:

For an engine with magnetos, a pulse is produced on the P-lead for each power stroke of the engine (three pulses per revolution for a six cylinder engine). The pulses can be in the hundreds of volts. An Isolator is connected between the P-lead and the EDC RPM inputs. The EDC monitors both magnetos.

The RPM reading for each RPM channel can be viewed in the "Function Configuration" screen found in the "System Config Screens Menu." This screen can be very helpful when troubleshooting.

Symptom: Inaccurate, jumpy or zero reading.

1. Problem: An Isolator was NOT used between the EDC RPM channel and the P-lead at the back of the Mag Switch. The signal on the P-lead is hundreds of volts and if an isolator is not used in series with this wire, damage to the RPM input on the EDC could occur.

a) Action: Check that there is an Isolator(s) in line with the RPM signal wires from the EDC.

If only one RPM channel is working, swap the wires to the EDC RPM channel and see if the problem follows the EDC channel or the wire to the P-lead.

2. Problem: The Isolators in line with the EDC are incorrect.

a) Action: If the RPM reading is jumping high, add a “47” or “79” Isolator in series with the existing Isolator. The signal from the P-lead is too strong.

If the RPM signal is from an electronic ignition, there should NOT be any Isolators in the wire to the EDC. The EDC RPM input triggers at 3 volts.

7.6 Fuel Flow Problem:

Fuel Flow is measured using a Flow Transducer. Power (+10 volts on the Red wire) and ground (Black wire) is supplied to the transducer from the EDC. A rotor in the transducer spins and produces pulses (0 to +5 volts) on the White wire. The +5 volts portion of the pulse on the White wire comes from a pull-up resistor in the EDC. The K-factor found in the “Fuel K-Factor” screen calibrates the pulses to produce a flow rate.

Symptom: Inaccurate readings.

1. Problem: The K-factor is incorrect.

a) Action: Check that the K-factor (found in the “Fuel K-Factor” screen) is correct for the transducer installed in the aircraft (FT-60 red cube = 68,000, FT-90 gold cube = 33,800 and the FT-180 black cube = 22,400).

Symptom: Inaccurate, jumpy or zero reading.

1. Problem: A wire is open, shorted or mis-wired.

a) Action: Measure the voltage on the transducer wires from the EDC at the Flow Transducer. The Red lead = +10 volts, Black wire = 0 volts, White wire = + 5 volts with the White wire removed from the flow transducer.

Ohm the Black wire to ground. The Black wire must be shorted to ground (< 10 ohms).

Rapidly tap the White transducer wire to ground. A small fuel flow reading should show on the CGR.

2. Problem: The rotor in the Fuel Flow Transducer is blocked.

- a) Action: Remove the Flow Transducer from the aircraft. Lightly blow into the transducer and check for the rotor to spin freely. Check for a Fuel Flow reading on the CGR when the rotor is spinning.

If the rotor in the Flow Transducer does not spin, hold the transducer over white paper and tap at all angles. Debris can lodge in the transducer and block the rotor.

7.7 Amp Problem:

Amps are measured on the aircraft using a Shunt. A Shunt has very low resistance and produces a differential voltage on the two signal wires connected to the Shunt. The differential voltage is proportional to the amperage flowing through the Shunt (50 mV at 50 Amps for the S-50 Shunt). In series with the two signal wires are two fuses to protect the wires from catching fire in case of a short. These fuses should be located a short distance from the Shunt. The wires are then routed to the EDC Amp input.

Symptom: Inaccurate, jumpy or zero reading.

1. Problem: A wire, fuse or fuse connection is open, shorted or mis-wired.

- a) Action: Remove one of the signal wires on the Shunt and connect it to the other signal wire. This will short the two signal wires together. The CGR should read 0.0 amps. A common problem is with the fuses or fuse holders in line with each Amp signal wire from the Shunt to the EDC. The fuses should be located a short distance from the shunt. Inspect the wires, fuses and fuse holders.

7.8 Resistive Fuel Level Problem:

Fuel can be measured in a fuel tank using a Resistive Float Sensor. The sensor must be connected to a RFLM (Resistive Fuel Level Module). This module provides a pull-up resistor to produce a voltage as the float changes resistance with changes in the fuel level. A signal wire connects the float to the RFLM and a wire connects the RFLM to the EDC. The RFLM requires bus voltage to provide the pull-up.

As the float sensor arm moves up, the resistance will change, creating a higher or lower voltage (depending on the float type) on the signal wire. The EDC monitors the signal and produces a digital value (called sensor counts) based on the signal voltage. The sensor counts can be viewed in the “Fuel Tank Calibration” screen. The sensor counts are then converted to a fuel level based on the calibration data in the “Fuel Tank Calibration” screen.

Resistive floats are notoriously inaccurate and inconsistent. Floats move up and down millions of times during their lives. They can move even when the aircraft is parked. The metal-to-metal contact of the wiper to the coil wears and corrodes. The wiper force weakens. The bearing surfaces wear. It’s not uncommon to even find new floats that work poorly. The CGR can calibrate out non-linearity, but inconsistency will always cause reading problems. It will cause you to perform the fuel tank calibration procedure over and over with little or no long-term improvement. Consider using a capacitive probe or our P-300M Magnetic fuel probe if at all possible.

Symptom: Inaccurate, jumpy or zero reading.

1. Problem: The RFLM is mis-wired.

- a) Action: Remove the signal wire to the Resistive Float. Check for a very high (or low, depending on the float type) sensor count in the "Function Mapping" screen found in the "Function Configuration" screen. Be sure you are displaying the data for the correct tank.

The voltage on the open signal wire should measure bus voltage.

Short the signal wire to ground. Check the sensor counts go to a low (or high, depending on the float type) reading.

2. Problem: The Resistive Float does not operate properly.

- a) Action: With the signal wire removed, measure the resistance of the float. This should not be done with a full or empty tank but somewhere in-between. Record the resistance reading and the variations. Lift the wing and allow it to return to its original position. Record the resistance reading and the variations. This test can be done at different fuel levels. If the resistance value does not return to its original value, you may have a defective Resistive Float.

Symptom: The sensor counts decrease as you add fuel.

1. Problem: The probe selected in the "Function Configuration" screen may be the wrong probe.

- a) Action: Check the Probe selected in the "Function Configuration" screen. The "RFLM-4 H=F" probe should be used on Resistive Floats where high resistance = full tank readings and the "RFLM-4 L=F" probe should be used on Resistive Floats where low resistance = full tank readings.

7.9 Capacitive Fuel Level Problem:

Fuel can be measured in a fuel tank using a Capacitive Fuel Probe. The Electronics International P-300 Capacitive Fuel Probe connects to an IMC (Interface Module) located near the probe, and to the EDC through three wires. Power (+5 volts) is supplied on the Red wire, ground is supplied on the Black wire and the fuel level signal (a 0 to +5 volt square wave) is supplied (by the P-300C) on the White wire.

As the fuel level in the tank increases, the capacitance of the probe increases. The IMC Module converts the capacitance to a frequency. The higher the fuel level, the lower the frequency of the square wave on the White wire.

The EDC monitors the signal and produces a digital value (called sensor counts) based on the signal frequency. The sensor counts can be viewed in the "Function Mapping" screen. The sensor counts are then converted to a fuel level based on the calibration data in the "Function Mapping" screen.

Symptom: Inaccurate, jumpy or zero reading.

1. Problem: The IMC is mis-wired.

- a) Action: Measure the voltage on the three wires at the IMC Module (Red wire = +5 volts, Black wire = ground, White wire = +2.5 volts).

Remove the Red wire from the IMC module and check the sensor counts on the "Function Mapping" screen to increase. Be sure you are displaying the data for the correct tank.

Touch the outside of the wires between the IMC Module and the probe and check that the sensor counts increase.

2. Problem: The P-300 Fuel Probe is shorted or there is water or contamination in the tank.

a) Action: Remove the wire from the IMC Module to the center terminal of the P-300 probe. Ohm the center terminal of the P-300 probe to ground. Check for $> 10 \text{ M Ohms}$. Remove the probe from the tank to resolve any issues.

7.10 Voltage Problem:

Bus voltage is measured on EDC pin 35 of the top connector.

Symptom: Inaccurate, jumpy or zero reading.

1. Problem: Pin 35 on the EDC top connector is mis-wired.

a) Action: Measure the voltage on pin 35 (look for bus voltage).

Blank Page

Technical Data

Specifications, Functions and Features

Blank Page

Specifications / Features

0226131

Rev.B: 7/12/2015

Models: CGR-30P-(), CGR-30A-(), CGR-30C-(), EDC-33P-() and EDC-33T-()-XX

CGR-30P-(), CGR-30A-() and CGR-30C-()

Configuration: The “-()” at the end of the Model ID represents a specific configuration.

Weight: 1.1 Lbs.

Environmental: Designed and Tested to TSO (DO-160G)

Software: Designed and Documented to TSO (DO-178B, Level C)

Minimum Performance Standards: TSO-C43c, TSO-C44c, TSO-C45b, TSO-C47a, TSO-C48a, TSO-49b and TSO-C55a.

Power Requirements: 7.5 to 30 Volts, 0.1 amps @ 24V (Typ), 0.2 amps @ 12 Volts (Typ).

USB Port: For USB Memory Stick use only.

Display: Active Matrix TFT, 262,144 colors, Sunlight readable

Backlight: External control line, programmable levels.

CGR-30P-() Functions:

- **Display of Primary Gauges with Red and/or Yellow Ranges:** Five on the Main Screen + EGT and CHT. One on the Secondary Screen.
- **Display of Primary and Non-Primary Gauges without Red and/or Yellow Ranges:** Five on the Main Screen + EGT and CHT. Six on the Secondary Screen.
- **Derived Function from Fuel Flow:** Fuel Remaining, Fuel Used Since Fill-up, Fuel Used for the Flight and Time to Empty. Fuel Remaining, Fuel Used Since Fill-up and Fuel Used for the Flight.
- **Derived Functions from GPS and Fuel Flow (Estimated):** Time to Destination, Time Reserve, Distance to Destination, Distance to Empty, Distance Reserve, Fuel to Destination, Fuel Reserve and Economy.
- **Derived Functions from Internal Timer:** Date, Local Time and Zulu Time.
- **Derived Functions from RPM:** Engine Time and Tach Time, Horsepower (also required M.P.)

CGR-30A-() and CGR-30C-() Functions:

- **Display of Primary Gauges with Red and/or Yellow Ranges:** Ten on the Main Screen + EGT and CHT. Six on the Secondary Screen. Any unused primary gauge locations may be used to display non-primary gauges.
- **Derived Functions from Internal Timer:** Date, Local Time and Zulu Time.
- **Derived Functions from RPM:** Engine Time and Tach Time, Horsepower (also required M.P.)

Error Messages:

“COM” - If communication is lost with the EDC, after 2 seconds all functions requiring signals from the EDC will display “COM” for its value.

“A2D” - If the EDC sends an error message for a specific channel, the function associated with that channel (on the MVP) will display **“A-D”** for the value.

“OVR” - If a channel on the EDC is over ranged (>2.5 volts differential), an “OVR” will be displayed for that function.

“REF” - If the reference for any function has a problem or a derived value used to calculate the function has a problem, the display for the function will show “REF.”

“FPR” - If a capacitance fuel probe is unplugged, or water touches the center electrode, the digital value for the fuel level will displayed “FPR.”

BC-5-()

Configuration: The “-()” at the end of the Model ID represents a specific configuration.

Weight: 0.66 Lbs

Environmental: Designed and Tested to TSO (DO-160E, See Environmental Qualification Form)

Software: Designed and Documented to TSO (DO-178B, Level C)

Power Requirements: 7.5 to 45 Volts, 0.1 amps (Typ).

FM-()

Configuration: The “-()” at the end of the Model ID represents a specific configuration.

Weight: 0.66 Lbs

Environmental: Designed and Tested to TSO (DO-160E, See Environmental Qualification Form)

Power Requirements: As specified.

Other Accessories as listed in the CGR MDL

Configuration: Model numbers shown in the CGR-30x MDL.

Weight: < 0.5 Lbs

Environmental: Designed and Tested to TSO (DO-160E, See Environmental Qualification Form)

Power Requirements: As specified

EDC-33P-() and EDC-33T-()
(Includes S Version)

Configuration: The “-()” at the end of the Model ID represents a specific configuration.

Weight: 1.0 Lb

Environmental: Designed and Tested to TSO (DO-160E)

Software: Designed and Documented to TSO (DO-178B, Level C)

Power Requirements: 7.5 to 50 Volts, 0.1 amps (Typ).

Accuracy all Functions: $\leq 1\%$ (Unless otherwise noted)

Input Configuration:

EDC-33P-(): 1-Volt Channel, 1-Amp Channel, 1-Fuel Flow Channel, 6-Pressure Channels, 17-Temp Channels, 4-Resistive Fuel Level Channels, 4-Capacitive Fuel Level Channels and 2-RPM Channels.

EDC-33T-() 1-Volt Channel, 1-Amp Channel, 1-Fuel Flow Channel, 9-Pressure Channels, 13-Temp Channels, 4-Resistive Fuel Level Channels or 4-Capacitive Fuel Level Channels and 2-RPM Channels.

Note: Temp, Fuel Level and Pressure channels can be used to monitor other functions or annunciators.

Volts:

Measured on pin 35 of the EDC Top Connector.

Input Resistance: 83.8K Ohms.

Range: 0 to 40 volts.

Sensitivity: 6400 counts per volt.

Note: A VI-221 or FM-VA-MVP-xx may be used to measure Voltage on any temperature channel.

Amps:

Common Mode Input Resistance: $> 10\text{ M Ohms}$

Diff. Input Resistance: 10K Ohms

Differential Input: +2.5V to -.2V

Common Mode: +/- 90 Volt to ground

Sensitivity: 9.537uV per count.

Note: An FM-VA-MVP-xx module may be used to measure Voltage and Amps on any two temp channels.

Fuel Flow:

Input Configuration: 5.11K Ohm pull-up to +5 Volts

Input Trigger: 2.5 Volt with over voltage protection.

Operating Range: 0 to 15 KHz.

Sensitivity: One count per pulse measure over a 0.356 second period.

Notes:

- * **+10 Volts are provided from the EDC to energize the flow transducer.**
- * **An FFD-1-MVP module may be used to accommodate fuel return from a pressure carburetor.**
- * **A FM-Flow-P module may be used to measure flow from a pulsed injector.**

RPM, Piston (EDC-33P-()): Two RPM channels are available. May be configured for digital or mag pickup. Also, may be set up to operate from one or two inputs. Selectable jumpers and different EDC models accommodate 2, 4, 6, 8, etc. cylinder engines. Inputs are over voltage protected. Mag Out feature provided.

Input Trigger: +3V / -1V

Input Resistance: 2.06K with 1 volt pull up.

Max RPM (EDC-33P-()-4/6): 4500, see Appendix for information on high RPM EDC units.

Sensitivity (EDC-33P-()-4/6): 20 counts per RPM

Notes: A 79K isolation resistor (supplied in the kit) must be put in series with the input when measuring signal from mags.

Max RPM: 6140 Hz.

Sensitivity: 16.1 sensor counts per Hz.

Accuracy: <= 0.5%

RPM, Turboprop:

Two RPM channels are available to measure N1, N2, Ng, Nh, Hp, Hl or other turboprop RPM functions. The “Engine Data, Ports, Timers, etc. Setup” screen provides data to calibrate these RPM values for a given tach generator output.

Temperature:

Input Range: 0 to 2.5 Volts Differential

Input Impedance: 12.1K Ohms on each input to ground

Sensitivity: 9.537uV per count.

Notes:

- * Any Temp Channel may be used to measure any thermocouple probe or any device outputting a voltage. In this way many different types of function may be monitored through a temperature channel. See an E.I. price sheet for a list of modules available.
- * A Reference junction is provided to accommodate TC probes. Temp channel 8 is closest to the “Ref Diode” and is best used for measuring OAT.

Resistive Fuel Level: The resistive and capacitive inputs share channels. Only one input type should be used per channel.

Input Range: 0 to 18 Volts single-ended input.

Input Impedance: 14.4K Ohms.

Sensitivity: .07169mV per count when set for non ratiometric measurement.

Notes:

- * The Resistive Fuel Level inputs may be used to monitor other functions or annunciators.
- * When monitoring a resistive probe a RFLM-4-12 or -24 module will be required (see E.I. price sheets). Also, measurements are made ratiometric to the bus voltage.

Capacitive Fuel Level: The resistive and capacitive inputs share channels. Only one input type should be used per channel.

Input Trigger Level: 2.1 Volts
Frequency Range: 0 to 15KHz.
Input Impedance: 33.2K Ohms
Sensitivity: 14 counts per Hz..

Notes: The Capacitive Fuel Level inputs may be used to monitor other functions.

EDC-33T-() (Both RPM Channels):

Input Trigger: +.39V / 0V (Hysteresis)
Input Resistance: 20K ohms
Max RPM: 123 Hz.
Accuracy: $\leq .5\%$

EDC-33T-()-H1:

Ch 1, Rotor:

Input Trigger: +.39V / 0V (Hysteresis)
Input Resistance: 20K ohms
Max RPM: 266 Hz.
Sensitivity: 372 sensor counts per Hz.
Accuracy: $\leq .5\%$

Ch 2, N1:

Input Trigger: +.11V / 0V (Hysteresis)
Input Resistance: 20K ohms
Max RPM: 6140 Hz.
Sensitivity: 16.1 sensor counts per Hz.
Accuracy: $\leq .5\%$

EDC-33T-()-W (Both RPM Channels):

Input Trigger: +.054V / 0V (Hysteresis)
Input Resistance: $> 1\text{M ohm}$
Max RPM: 11.0 KHz.
Sensitivity: 8.963 sensor counts per Hz.
Accuracy: $\leq .5\%$

Pressure:

Input: 0 to 2.5 Volts Differential
Input Impedance: $> 20\text{M Ohms}$
Common Mode Range on the Input: + 4 Volts to -.2 Volts (from ground).
+5 Volt and Ground provided to energize the pressure transducer.
Sensitivity: Ratiometric to the EDC +5 Volt supply ($9.537\mu\text{V} \times (5/(\text{voltage of the EDC +5V supply}))$)

Notes: Many pressure transducers are available to monitor many different functions. See an E.I. price sheet for a list of pressure transducers available.

Blank Page

Appendix

STC and AML

Blank Page

United States of America
Department of Transportation - Federal Aviation Administration
Supplemental Type Certificate

Number SA02402SE

This certificate, issued to

**Electronics International Inc.
63296 Powell Butte Highway
Bend, OR 97701**

*certifies that the change in the type design for the following product with the limitations and conditions therefore as specified hereon meets the airworthiness requirements of Part * of the * Regulations.*

Original Product—Type Certificate Number:

* See attached Federal Aviation Administration (FAA)

Make:

Approved Model List (AML) SA02402SE for approved

Model:

aircraft models and applicable airworthiness regulations

Description of the Type Design Change: Installation of Electronics International Inc. Glass Panel Engine Monitor (with In-Flight Data) CGR-30C in accordance with the applicable master drawing list as specified on AML SA02402SE, or later FAA-approved revision. This modification must be inspected and maintained in accordance with Electronics International, Inc. Instructions for Continued Airworthiness, Document No. 06211301, Revision E, dated March 28, 2014, or later FAA-accepted revision.

Limitations and Conditions: Approval of this change in type design applies to the airplanes listed on AML SA02402SE only. This approval should not be extended to other aircraft of these models unless the installer determines that the relationship between this change and any other previously incorporated approved modifications will introduce no adverse effect upon the airworthiness of that aircraft. A copy of this certificate, AML SA02402SE, the ICA, and the FAA-approved airplane flight manual supplement as specified on AML SA02402SE, must be maintained as part of the permanent records for the modified aircraft.

If the holder agrees to permit another person to use this certificate to alter the product, the holder shall give the other person written evidence of that permission.

This certificate and the supporting data which is the basis for approval shall remain in effect until surrendered, suspended, revoked, or a termination date is otherwise established by the Administrator of the Federal Aviation Administration.

Date of application: October 30, 2013

Date reissued:

Date of issuance: June 24, 2014

Date amended:



By direction of the Administrator

John F. Zill
(Signature)
Manager, Seattle Aircraft Certification Office
(Title)

Any alteration of this certificate is punishable by a fine of not exceeding \$1,000, or imprisonment not exceeding 3 years, or both.

This certificate may be transferred in accordance with FAR 21.47.

FEDERAL AVIATION ADMINISTRATION (FAA) APPROVED MODEL LIST (AML) SA02402SE
FOR
INSTALLATION OF ELECTRONICS INTERNATIONAL INC. GLASS PANEL ENGINE MONITOR (WITH IN-FLIGHT DATA) CGR-30C
ISSUE DATE: June 24, 2014

ITEM	AIRCRAFT MAKE	AIRCRAFT MODEL	ORIGINAL TC NUMBER	CERTIFICATION BASIS FOR ALTERATION	FAA APPROVED AIRCRAFT FLIGHT MANUAL SUPPLEMENT		FAA APPROVED MASTER DRAWING LIST		AML REV DATE
					Number	Revision*	Drawing	Revision*	
---	---	---	---	---	AFM1030131	Revision B	MDL 02041301	Revision New, dated February 4, 2013	---
1.	Aermacchi S.p.A.	S.205-18/F, S.205-18/R, S.205-20/F, S.205-20/R, S.205-22/R, S.208, S.208A	A9EU	FAR 21	"	"	"	"	
2.	Aermacchi S.p.A.	F.260, F.260B, F.260C, F.260D, F.260E, F.260F	A10EU	FAR 21.29	"	"	"	"	
3.	Aero Commander	(Volare) 10, (Volare) 10A, (Aero Commander) 100, (Aero Commander) 100A, (Aero Commander) 100-180	1A21	CAR 3	"	"	"	"	
4.	Aeromot	AMT-100, AMT-200, AMT-300, AMT-200S	TG00004AT	FAR 21	"	"	"	"	
5.	Aeronca	50-L, 50-LA, 65-LA, (L-3G) 65-LB	A-702	CAR 4a	"	"	"	"	
6.	Aeronca	C-3, PC-3	A-396	Aero. Bulletin 7-A	"	"	"	"	
7.	Aerostar	PA-60-600 (Aerostar 600) PA-60-601 (Aerostar 601) PA-60-601P (Aerostar 601P) PA-60-602P (Aerostar 602P) PA-60-700P (Aerostar 700P)	A17WE	FAR 23	"	"	"	"	
8.	Air Tractor	AT-250, AT-300, AT-301	A9SW	FAR 21.25(a)(1)	"	"	"	"	
9.	Air Tractor	AT-401, AT-401A, AT-401B, AT-501	A17SW	FAR 21	"	"	"	"	
10.	Alexandria Aircraft	14-19, 14-19-2, 14-19-3, 14-19-3A, 17-30, 17-31, 17-31TC	1A3	CAR 3	"	"	"	"	
11.	Alexandria Aircraft	17-30A, 17-31A, 17-31ATC	A18CE	FAR 23	"	"	"	"	
12.	Allied Ag Cat Productions, Inc.	G-164, G-164A, G-164B, G-164C	1A16	CAR 8	"	"	"	"	

FEDERAL AVIATION ADMINISTRATION (FAA) APPROVED MODEL LIST (AML) SA02402SE
FOR
INSTALLATION OF ELECTRONICS INTERNATIONAL INC. GLASS PANEL ENGINE MONITOR (WITH IN-FLIGHT DATA) CGR-30C
ISSUE DATE: June 24, 2014

ITEM	AIRCRAFT MAKE	AIRCRAFT MODEL	ORIGINAL TC NUMBER	CERTIFICATION BASIS FOR ALTERATION	FAA APPROVED AIRCRAFT FLIGHT MANUAL SUPPLEMENT		FAA APPROVED MASTER DRAWING LIST		AML REV DATE
					Number	Revision*	Drawing	Revision*	
---	---	---	---	---	AFM1030131	Revision B	MDL 02041301	Revision New, dated February 4, 2013	---
13.	American Champion (Bellanca, Champion, Aeronca)	7AC, 7ACA, S7AC, (L-16A) 7BCM, (L-16B) 7CCM, S7CCM, 7DC, S7DC, 7EC, S7EC, 7ECA, 7FC, 7GC, 7GCA, 7GCAA, 7GCB, 7GGBA, 7GCBC, 7HC, 7JC, 7KC, 7KCAB	A-759	CAR 4a	"	"	"	"	
14.	American Champion (Bellanca, Champion)	8KCAB, 8GCBC	A21CE	CAR 8	"	"	"	"	
15.	American Champion (Aeronca, Bellanca, Trytek)	11AC, S11AC, 11BC, S11BC	A-761	CAR 4a	"	"	"	"	
16.	American Champion (Aeronca, Bellanca, Trytek)	11CC, S11CC	A-796	CAR 3	"	"	"	"	
17.	Arizona Aerospace (Taylorcraft)	(Army L-2, L-2C) DC-65, (Army L-2E) DF-65, (Army L-2D) DL-65, (Army L-2A, -2B, -2M) DCO-65	A-746	CAR 4a	"	"	"	"	
18.	Aviat Aircraft, Inc.	A-1, A-1A, A-1B, A-1C-180, A-1C-200	A22NM	FAR 23	"	"	"	"	
19.	Aviat Aircraft, Inc.	S-1S, S-1T, S-2, S-2A, S-2S, S-2B, S-2C	A8SO	FAR 23	"	"	"	"	
20.	B-N Group Ltd.	BN-2, BN-2A, BN-2A-6, BN-2A-8, BN-2A-2, BN-2A-9, BN-2A-3, BN-2A-20, BN-2A-21, BN-2A-26, BN-2A-27, BN-2B-20, BN-2B-21, BN-2B-26, BN-2B-27	A17EU	FAR 21	"	"	"	"	
21.	Beechcraft	D17A	713	CAR 4a	"	"	"	"	
22.	Beechcraft	D17R (Army UC-43A)	638	CAR 4a	"	"	"	"	

FEDERAL AVIATION ADMINISTRATION (FAA) APPROVED MODEL LIST (AML) SA02402SE
FOR
INSTALLATION OF ELECTRONICS INTERNATIONAL INC. GLASS PANEL ENGINE MONITOR (WITH IN-FLIGHT DATA) CGR-30C
ISSUE DATE: June 24, 2014

ITEM	AIRCRAFT MAKE	AIRCRAFT MODEL	ORIGINAL TC NUMBER	CERTIFICATION BASIS FOR ALTERATION	FAA APPROVED AIRCRAFT FLIGHT MANUAL SUPPLEMENT		FAA APPROVED MASTER DRAWING LIST		AML REV DATE
					Number	Revision*	Drawing	Revision*	
---	---	---	---	---	AFM1030131	Revision B	MDL 02041301	Revision New, dated February 4, 2013	---
23.	Beechcraft	D17S (Army UC-43, UC-43B, Navy GB-1, GB-2), SD17S	A-649	Aero. Bulletin 7-A	"	"	"	"	
24.	Beechcraft	E17B (Army UC-43D) SE17B, E17L	641	CAR 4a	"	"	"	"	
25.	Beechcraft	F17D, SF17D	689	CAR 4a	"	"	"	"	
26.	Beechcraft	G17S	779	Aero. Bulletin 7-A	"	"	"	"	
27.	Beechcraft	18A, S18A	630	Aero. Bulletin 7-A	"	"	"	"	
28.	Beechcraft	18D, A18A, A18D, S18D, SA18A, SA18D	A-684	Aero. Bulletin 7-A	"	"	"	"	
29.	Beechcraft	Beechcraft C18S (Army C-45, -45A, -45F, UC-45B, -45F, AT-7, -7A, -7B, -7C; Navy JRB-1, -2, -3, -4, SNB-2, -2C)	A-757	CAR 4a	"	"	"	"	
30.	Beechcraft	19A, B19, M19A, 23, A23, A23A, A23-19, A23-24, B23, C23, A24, A24R, B24R, C24R	A1CE	CAR 3	"	"	"	"	
31.	Beechcraft	35, A35, B35, C35, D35, E35, F35, G35, 35R	A-777	CAR 3	"	"	"	"	
32.	Beechcraft	45 (YT-34), A45 (T-34A, B-45), D45 (T-34B)	5A3	CAR 3	"	"	"	"	
33.	Beechcraft	50 (L-23A), B50 (L-23B), C50, D50 (L-23E), D50A, D50B, D50C, D50E, D50E-5990, E50 (L-23D, RL-23D), F50, G50, H50, J50	5A4	CAR 3	"	"	"	"	
34.	Beechcraft	B95A, D95A, E95, 95-55, 95-A55, 95-B55, 95-B55A, 95-B55B (T-42), 95-C55, 95-C55A, G58, D55, D55A, E55, E55A, 56TC, A56TC, 58, 58A, 95, B95	3A16	CAR 3	"	"	"	"	
35.	Beechcraft	58P, 58PA, 58TC, 58TCA	A23CE	FAR 23	"	"	"	"	
36.	Beechcraft	60, A60, B60	A12CE	FAR 23	"	"	"	"	
37.	Beechcraft	65 (L-23F), A65, A-65-8200, 65-80, 65-A80, 65-A80-8800, 65-B80, 65-88	3A20	CAR 3	"	"	"	"	

FEDERAL AVIATION ADMINISTRATION (FAA) APPROVED MODEL LIST (AML) SA02402SE
FOR
INSTALLATION OF ELECTRONICS INTERNATIONAL INC. GLASS PANEL ENGINE MONITOR (WITH IN-FLIGHT DATA) CGR-30C
ISSUE DATE: June 24, 2014

ITEM	AIRCRAFT MAKE	AIRCRAFT MODEL	ORIGINAL TC NUMBER	CERTIFICATION BASIS FOR ALTERATION	FAA APPROVED AIRCRAFT FLIGHT MANUAL SUPPLEMENT		FAA APPROVED MASTER DRAWING LIST		AML REV DATE
					Number	Revision*	Drawing	Revision*	
---	---	---	---	---	AFM1030131	Revision B	MDL 02041301	Revision New, dated February 4, 2013	---
38.	Beechcraft	76	A29CE	FAR 23	"	"	"	"	
39.	Beechcraft Corporation	77	A30CE	FAR 23	"	"	"	"	
40.	Beechcraft	35-33, 35-A33, 35-B33, 35-C33, 35-C33A, E33, E33A, E33C, F33, F33A, F33C, G33, H35, G36, J35, K35, M35, N35, P35, S35, V35, V35A, V35B, 36, A36, A36TC, B36TC	3A15	CAR 3	"	"	"	"	
41.	Bellanca	14-13, 14-13-2, 14-13-3, 14-13-3W	A-773	CAR 4a	"	"	"	"	
42.	Blanchair (Eagle)	DW-1	A4NW	FAR 21	"	"	"	"	
43.	Boeing (North American)	BC-1A, AT-6 (SNJ-2), AT-6A (SNJ-3), AT-6B, AT-6C (SNJ-4), AT-6D (SNJ-5), AT-6F (SNJ-6), T-6G, SNJ-7	A-2-575	CAR 4a	"	"	"	"	
44.	Boeing	A75L3, 75 (Army PT-13), A75 (Army PT-13A, -13B, -13C), B75 (Navy N2S-5), E75 (Army PT-13D, Navy N2S-5, PT-13D/N2S-5), A75J1 (Army PT-18), A75L300, A75N1 (Army PT-17, -17A, Navy N2S-1, -4), B75N1 (Navy N2S-3), D75N1 (Army PT-27), IB75A, E75N1	A-743	CAR 4a	"	"	"	"	
45.	Boeing	DC3-G102, DC3-G102A (Army C-49E, C-50, C-50A, C-50B, C-50C, C-50D, C-51), DC3-G103A, DC3-G202A (Army C-49, C-49A, C-49B, C-49C, C-49D, C-49J, C-49K; Navy R4D-2)	A-618	Aero. Bulletin 7-A	"	"	"	"	

FEDERAL AVIATION ADMINISTRATION (FAA) APPROVED MODEL LIST (AML) SA02402SE
FOR
INSTALLATION OF ELECTRONICS INTERNATIONAL INC. GLASS PANEL ENGINE MONITOR (WITH IN-FLIGHT DATA) CGR-30C
ISSUE DATE: June 24, 2014

ITEM	AIRCRAFT MAKE	AIRCRAFT MODEL	ORIGINAL TC NUMBER	CERTIFICATION BASIS FOR ALTERATION	FAA APPROVED AIRCRAFT FLIGHT MANUAL SUPPLEMENT		FAA APPROVED MASTER DRAWING LIST		AML REV DATE
					Number	Revision*	Drawing	Revision*	
---	---	---	---	---	AFM1030131	Revision B	MDL 02041301	Revision New, dated February 4, 2013	---
46.	Bombardier	(Caribou) DHC-4 (Caribou) DHC-4A	1A19	CAR 10	"	"	"	"	
47.	Camair	480	2A2	CAR 3	"	"	"	"	
48.	Cessna	120, 140	A-768	CAR 4a	"	"	"	"	
49.	Cessna	C-145, C-165 (Army UC-94)	A-701	CAR 4a	"	"	"	"	
50.	Cessna	150, 150A, 150B, 150C, 150D, 150E, 150F, 150G, 150H, 150J, 150K, A150K, 150L, A150L, 150M, A150M, 152, A152	3A19	CAR 3	"	"	"	"	
51.	Cessna	F150F, F150G, F150H, F150J, F150K, F150L, F150M, F152, FA150K, FA150L, FA150M, FA152, FRA150L, FRA150M	A13EU	CAR 3	"	"	"	"	
52.	Cessna	Cessna FR172E, Cessna FR172F, Cessna FR172G, Cessna FR172H, Cessna FR172J, Cessna FR172K	A18EU	CAR 3	"	"	"	"	
53.	Cessna	Cessna F177RG	A26EU	FAR 23	"	"	"	"	
54.	Cessna	Cessna F182P, Cessna F182Q, Cessna FR182	A42EU	CAR 3	"	"	"	"	
55.	Cessna	170, 170A, 170B	A-799	CAR 3	"	"	"	"	
56.	Cessna	172, 172A, 172B, 172C, 172D, 172E, 172F (USAF T-41A), 172G, 172H (USAF T-41A), 172I, 172K, 172L, 172M, 172N, 172P, 172Q, 172R, 172S	3A12	FAR 23	"	"	"	"	
57.	Cessna	175, 175B, P172D, R172E (USAF T-41B) (USAF T-41C and D), R172F (USAF T-41D), R172G (USAF T-41C or D), R172H (USAF T-41D), R172J, 172RG, 175A, 175C, R172K	3A17	CAR 3	"	"	"	"	
58.	Cessna	177, 177A, 177B	A13CE	FAR 23	"	"	"	"	
59.	Cessna	177RG	A20CE	FAR 23	"	"	"	"	

FEDERAL AVIATION ADMINISTRATION (FAA) APPROVED MODEL LIST (AML) SA02402SE
FOR
INSTALLATION OF ELECTRONICS INTERNATIONAL INC. GLASS PANEL ENGINE MONITOR (WITH IN-FLIGHT DATA) CGR-30C
ISSUE DATE: June 24, 2014

ITEM	AIRCRAFT MAKE	AIRCRAFT MODEL	ORIGINAL TC NUMBER	CERTIFICATION BASIS FOR ALTERATION	FAA APPROVED AIRCRAFT FLIGHT MANUAL SUPPLEMENT		FAA APPROVED MASTER DRAWING LIST		AML REV DATE
					Number	Revision*	Drawing	Revision*	
---	---	---	---	---	AFM1030131	Revision B	MDL 02041301	Revision New, dated February 4, 2013	---
60.	Cessna	180, 180A, 180B, 180C, 180D, 180E, 180F, 180G, 180H, 180J, 180K	5A6	CAR 3	"	"	"	"	
61.	Cessna	182, 182A, 182B, 182C, 182D, 182E, 182F, 182G, 182H, 182J, 182S, 182T, 182K, 182L, 182M, 182N, 182P, 182Q, 182R, 182T, 182, TR182, T182T	3A13	CAR 3	"	"	"	"	
62.	Cessna	185, 185A, 185B, 185C, 185D, 185E, A185E, A185F	3A24	CAR 3	"	"	"	"	
63.	Cessna	188, 188A, 188B, A188, A188A, A188B, T188C	A9CE	CAR 3	"	"	"	"	
64.	Cessna	190, (LC-126A,B,C) 195, 195A, 195B	A-790	CAR 3	"	"	"	"	
65.	Cessna	206, P206, P206A, P206B, P206C, P206D, P206E, U206, U206A, 206H, U206B, U206C, U206D, U206E, U206F, U206G, TP206A, TP206B, TP206C, T206H, TP206D, TP206E, TU206A, TU206B, TU206C, TU206D, TU206E, TU206F, TU206G	A4CE	CAR 3	"	"	"	"	
66.	Cessna	207, 207A, T207, T207A	A16CE	FAR 23	"	"	"	"	
67.	Cessna	210, 210A, 210B, 210C, 210D, 210E, 210F, T210F, 210G, T210G, 210H, T210H, 210J, T210J, 210K, T210K, 210L, T210L, 210M, T210M, 210N, P210N, T210N, 210R, P210R, T210R, 210-5 (205), 210-5A (205A)	3A21	CAR 3	"	"	"	"	
68.	Cessna	T303	A34CE	FAR 23	"	"	"	"	
69.	Cessna	(USAF 0-1A) 305A, (USAF 0-1E) 305C, (USAF 0-1G) 305D, 305F	5A5	CAR 3	"	"	"	"	

FEDERAL AVIATION ADMINISTRATION (FAA) APPROVED MODEL LIST (AML) SA02402SE
FOR
INSTALLATION OF ELECTRONICS INTERNATIONAL INC. GLASS PANEL ENGINE MONITOR (WITH IN-FLIGHT DATA) CGR-30C
ISSUE DATE: June 24, 2014

ITEM	AIRCRAFT MAKE	AIRCRAFT MODEL	ORIGINAL TC NUMBER	CERTIFICATION BASIS FOR ALTERATION	FAA APPROVED AIRCRAFT FLIGHT MANUAL SUPPLEMENT		FAA APPROVED MASTER DRAWING LIST		AML REV DATE
					Number	Revision*	Drawing	Revision*	
---	---	---	---	---	AFM1030131	Revision B	MDL 02041301	Revision New, dated February 4, 2013	---
70.	Cessna	(Military TO-1D, O-1D, O-1F) 305B, (Military TO-1D, O-1D, O-1F) 305E	3A14	CAR 3	"	"	"	"	
71.	Cessna	310, 310A(USAF U-3A), 310B, 310C, 310D, 310E(USAF U-3B), 310F, 310G, 310H, E310H, 310I, 310J, 310J-1, E310J, 310K, 310L, 310N, 310P, T310P, 310Q, T310Q, 310R, T310R	3A10	CAR 3	"	"	"	"	
72.	Cessna	320, 320-1, 320A, 320B, 320C, 320D, 320E, 320F, 335, 340, 340A	3A25	CAR 3	"	"	"	"	
73.	Cessna	321 (Navy OE-2)	3A11	CAR 3	"	"	"	"	
74.	Cessna	401, 401A, 401B, 402, 402A, 402B, 402C, 411, 411A, 414, 414A, 421, 421A, 421B, 421C	A7CE	CAR 3	"	"	"	"	
75.	Cessna	404	A25CE	FAR 23	"	"	"	"	
76.	Cessna	LC40-550FG, LC41-550FG, LC42-550FG	A00003SE	FAR 23	"	"	"	"	
77.	Cirrus Design Corporation	SR20, SR22, SR22T	A00009CH	FAR 23	"	"	"	"	
78.	Clark	1000	2A6	CAR 8	"	"	"	"	
79.	Clark	12	2A12	CAR 8	"	"	"	"	
80.	CPAC, Inc.	112, 114, 112TC, 112B, 112TCA, 114A, 114B, 114TC	A12SO	FAR 23	"	"	"	"	
81.	Cub Crafters	CC18-180, CC18-180A	A00006SE	FAR 23	"	"	"	"	
82.	Daimlerchrysler Aerospace AG	BO-209-150 FV & RV, BO-209-160 FV & RV, BO-209-150 FF	A27EU	FAR 21	"	"	"	"	
83.	De Havilland	DH 82A	A5PC	FAR 21	"	"	"	"	
84.	De Havilland	DH 82A	A8EU	FAR 21	"	"	"	"	

FEDERAL AVIATION ADMINISTRATION (FAA) APPROVED MODEL LIST (AML) SA02402SE
FOR
INSTALLATION OF ELECTRONICS INTERNATIONAL INC. GLASS PANEL ENGINE MONITOR (WITH IN-FLIGHT DATA) CGR-30C
ISSUE DATE: June 24, 2014

ITEM	AIRCRAFT MAKE	AIRCRAFT MODEL	ORIGINAL TC NUMBER	CERTIFICATION BASIS FOR ALTERATION	FAA APPROVED AIRCRAFT FLIGHT MANUAL SUPPLEMENT		FAA APPROVED MASTER DRAWING LIST		AML REV DATE
					Number	Revision*	Drawing	Revision*	
---	---	---	---	---	AFM1030131	Revision B	MDL 02041301	Revision New, dated February 4, 2013	---
85.	De Havilland	DH.C1 Chipmunk 21, DH.C1 Chipmunk 22, DH.C1 Chipmunk 22A	A44EU	FAR 21	"	"	"	"	
86.	De Havilland	L-20A	AR-33	CAR 8	"	"	"	"	
87.	De Havilland	DHC-1B-2-S3, DHC-1B-2-S5	A26NM	FAR 21	"	"	"	"	
88.	De Havilland	D.H. 104 Dove Series 1A, 2A, 5A, 5BA, 6A, 6BA, 7A, 8A, 7AXC, 8AXC	A-807	CAR 10	"	"	"	"	
89.	De Havilland	D.H. 114 Heron Series 2A Series 2DA, Series 2X	A-816	CAR 10	"	"	"	"	
90.	Diamond	DA20-A1, DA20-C1	TA4CH	FAR 21	"	"	"	"	
91.	Diamond	DA 40, DA 40 F	A47CE	FAR 21	"	"	"	"	
92.	Dornier	Do 27 Q-6	A8IN	CAR 10	"	"	"	"	
93.	Dornier	Do 28 A-1, Do 28 B-1	7A13	CAR 10	"	"	"	"	
94.	Dornier Luffahrt GmbH	Do 28 D, Do 28 D-1,	A16EU	FAR 23	"	"	"	"	
95.	Extra	EA-300, EA-300/S, EA-300/L, EA-300/200	A67EU	FAR 23	"	"	"	"	
96.	Extra	EA 400	A43CE	FAR 21	"	"	"	"	
97.	Fairchild	24R9 (Army UC-61C), 24R9S, 24R40 (Army UC-86), 24R40S, 24R46, 24R46S, 24R46A (Army UC-61K)	A-706	CAR 4a	"	"	"	"	
98.	Fairchild	24W-9 (Army UC-61F), 24W-9S, 24W-40 (Army UC-61G), 24W-40S, 24W-41 (Army UC-61), 24W-41S, 24W-41A (Army UC-61A), 24W-41AS, 24W-46, 24W-46S	A-707	CAR 4a	"	"	"	"	

FEDERAL AVIATION ADMINISTRATION (FAA) APPROVED MODEL LIST (AML) SA02402SE
FOR
INSTALLATION OF ELECTRONICS INTERNATIONAL INC. GLASS PANEL ENGINE MONITOR (WITH IN-FLIGHT DATA) CGR-30C
ISSUE DATE: June 24, 2014

ITEM	AIRCRAFT MAKE	AIRCRAFT MODEL	ORIGINAL TC NUMBER	CERTIFICATION BASIS FOR ALTERATION	FAA APPROVED AIRCRAFT FLIGHT MANUAL SUPPLEMENT		FAA APPROVED MASTER DRAWING LIST		AML REV DATE
					Number	Revision*	Drawing	Revision*	
---	---	---	---	---	AFM1030131	Revision B	MDL 02041301	Revision New, dated February 4, 2013	---
99.	Fairchild	M62A (Army PT-19, 19A, -19A-AE, -19A-SL, -19B, -19B-AE), M62A-3 or M62A-4 (Army PT-26, -26A, -26B), M62B, M62C (Army PT-23, -23-AE, -23-HO, -23-SL, -23A, -23A-SL)	A-724	CAR 4a	"	"	"	"	
100.	Fairchild	24 C8C, 24 C8CS	A-535	Aero. Bulletin 7-A	"	"	"	"	
101.	Fairchild	M-84-C	A-2-599	CAR 4a	"	"	"	"	
102.	FS 2001 Corp.	J5A (Army L-4F), J5A-80, J5B (Army L-4G), J5C, AE-1, HE-1	A-725	CAR 4a	"	"	"	"	
103.	FS 2002 Corp.	PA-14	A-797	CAR 3	"	"	"	"	
104.	FS2003 Corp.	PA-12, PA-12S	A-780	CAR 3	"	"	"	"	
105.	Fuji	FA-200-160, FA-200-180, FA-200-180AO	A4PC	CAR 10	"	"	"	"	
106.	Globe	GC-1A, GC-1B	A-766	CAR 4a	"	"	"	"	
107.	Grob	G115, G115A, G115B, G115C, G115C2, G115D, G115D2, G115EG	A57EU	FAR 21	"	"	"	"	
108.	Gulfstream Aerospace	Model 111	A11SO	FAR 23	"	"	"	"	
109.	Hawker Beechcraft	B17L, SB17L, B17B	ATC 560	CAR 4a	"	"	"	"	
110.	Hawker Beechcraft	B17R (Army UC-43H)	ATC 579	CAR 4a	"	"	"	"	
111.	Hawker Beechcraft	C17L, C17B, SC17L, SC17B	ATC 602	CAR 4a	"	"	"	"	
112.	Hawker Beechcraft	C17R (Army UC-43E), SC17R	ATC 604	CAR 4a	"	"	"	"	
113.	GA8 Airvan (Pty) Ltd	GA8, GA8-TC320	A00011LA	FAR 23	"	"	"	"	
114.	Gulfstream American	G-44 (Army OA-14, Navy J4F-2), G-44A, SCAN Type 30	A-734	CAR 4a	"	"	"	"	

FEDERAL AVIATION ADMINISTRATION (FAA) APPROVED MODEL LIST (AML) SA02402SE
FOR
INSTALLATION OF ELECTRONICS INTERNATIONAL INC. GLASS PANEL ENGINE MONITOR (WITH IN-FLIGHT DATA) CGR-30C
ISSUE DATE: June 24, 2014

ITEM	AIRCRAFT MAKE	AIRCRAFT MODEL	ORIGINAL TC NUMBER	CERTIFICATION BASIS FOR ALTERATION	FAA APPROVED AIRCRAFT FLIGHT MANUAL SUPPLEMENT		FAA APPROVED MASTER DRAWING LIST		AML REV DATE
					Number	Revision*	Drawing	Revision*	
---	---	---	---	---	AFM1030131	Revision B	MDL 02041301	Revision New, dated February 4, 2013	---
115.	Helio (Taylorcraft)	15A, 20	3A3	CAR 4a	"	"	"	"	
116.	Helio	H-250, (USAF U-10D) H-295, HT-295, (USAF YL-24) H-391, H-391B, (USAF L-28A or U-10B) H-395, H-395A, H-700, H-800	1A8	CAR 3	"	"	"	"	
117.	Helio	500	A2EA	CAR 3	"	"	"	"	
118.	Howard	DGA-8 (Army UC-70C)	612	Aero. Bulletin 7-A	"	"	"	"	
119.	Howard	DGA-9 (Army UC-70D), DGA-12 (Army UC-70A)	645	Aero. Bulletin 7-A	"	"	"	"	
120.	Howard	DGA-11	672	Aero. Bulletin 7-A	"	"	"	"	
121.	Howard	DGA-15P (Army UC-70; Navy GH-1, GH-2, GH-3, NH-1), DGA-15J (Army UC-70B), DGA-15W	A-717	CAR 4a	"	"	"	"	
122.	Howard	DGA-18, DGA-18K	739	CAR 4a	"	"	"	"	
123.	Interceptor (Aero Meyers, Interceptor)	200, 200A, 200B, 200C, 200D	3A18	CAR 3	"	"	"	"	
124.	Interstate	S-1A, S-1A-65F, S-1A-85F, S-1A-90F	A-737	CAR 4a	"	"	"	"	
125.	Interstate	S-1B1 (Army L-6, XL-6), S-1B2	A-754	CAR 4a	"	"	"	"	
126.	Jodel	D-140-B	A3IN	CAR 10	"	"	"	"	
127.	Jodel	DR-1050	A4IN	CAR 10	"	"	"	"	
128.	Jodel	D-1190	A10IN	CAR 10	"	"	"	"	
129.	Jodel	150	A14IN	CAR 10	"	"	"	"	
130.	Lavia Argentina S.A.	PA-25, PA-25-235, PA-25-260	2A10	CAR 8, 10(b)	"	"	"	"	
131.	Lavia S.A.	PA-25, PA-25-235, PA-25-260	2A8	CAR 3	"	"	"	"	
132.	Luscombe	8, 8A, 8B, 8C, 8D, 8E, 8F, T-8F	A-694	CAR 4a	"	"	"	"	

FEDERAL AVIATION ADMINISTRATION (FAA) APPROVED MODEL LIST (AML) SA02402SE
FOR
INSTALLATION OF ELECTRONICS INTERNATIONAL INC. GLASS PANEL ENGINE MONITOR (WITH IN-FLIGHT DATA) CGR-30C
ISSUE DATE: June 24, 2014

ITEM	AIRCRAFT MAKE	AIRCRAFT MODEL	ORIGINAL TC NUMBER	CERTIFICATION BASIS FOR ALTERATION	FAA APPROVED AIRCRAFT FLIGHT MANUAL SUPPLEMENT		FAA APPROVED MASTER DRAWING LIST		AML REV DATE
					Number	Revision*	Drawing	Revision*	
---	---	---	---	---	AFM1030131	Revision B	MDL 02041301	Revision New, dated February 4, 2013	---
133.	Maule	Bee Dee M-4, M-4, M-4C, M-4S, M-4T, M-4-180C, M-4-180S, M-4-180T, M-4-210, M-4-210C, M-4-210S, M-4-210T, M-4-220, M-4-220C, M-4-220S, M-4-220T, M-5-180C, M-5-200, M-5-210C, M-5-210TC, M-5-220C, M-5-235C, M-6-180, M-6-235, M-7-235, MX-7-235, MX-7-180, MXT-7-180, MT-7-235, M-8-235, MX-7-160, MXT-7-160, MX-7-180A, MXT-7-180B, M-7-235B, M-7-235A, M-7-235C, MX-7-180C, M-7-260, MT-7-260, M-7-260C, MX-7-160C, MX-7-180AC, M-4-180V, M-9-235	3A23	CAR 3	"	"	"	"	
134.	Mooney	M-18C, M-18C55, M-18L, M-18LA	A-803	CAR 3	"	"	"	"	
135.	Mooney	M20, M20A, M20B, M20C, M20D, M20E, M20F, M20G, M20J, M20K, M20L, M20M, M20R, M20S, M20TN	2A3	CAR 3	"	"	"	"	
136.	Mooney	M22	A6SW	CAR 3	"	"	"	"	
137.	Navion	Navion (L-17A), Navion A (L-17B)(L-17C), Navion B, Navion D, Navion E, Navion F, Navion G, Navion H	A-782	CAR 3	"	"	"	"	
138.	Piaggio	P.136-L, P.136-L1, P.136-L2	A-813	CAR 10	"	"	"	"	
139.	Piaggio	P.166, P.166B, P.166C	7A4	CAR 10	"	"	"	"	
140.	Pilatus	PC-6, PC-6-H1, PC-6-H2, PC-6/350, PC-6/350-H1, PC-6/350-H2	7A15	CAR 10	"	"	"	"	
141.	Piper Aircraft, Inc.	J3F-50, J3F-50S, J3F-60, J3F-60S, (Army L-4D) J3F-65, J3F-65S	A-692	CAR 4a	"	"	"	"	

FEDERAL AVIATION ADMINISTRATION (FAA) APPROVED MODEL LIST (AML) SA02402SE
FOR
INSTALLATION OF ELECTRONICS INTERNATIONAL INC. GLASS PANEL ENGINE MONITOR (WITH IN-FLIGHT DATA) CGR-30C
ISSUE DATE: June 24, 2014

ITEM	AIRCRAFT MAKE	AIRCRAFT MODEL	ORIGINAL TC NUMBER	CERTIFICATION BASIS FOR ALTERATION	FAA APPROVED AIRCRAFT FLIGHT MANUAL SUPPLEMENT		FAA APPROVED MASTER DRAWING LIST		AML REV DATE
					Number	Revision*	Drawing	Revision*	
---	---	---	---	---	AFM1030131	Revision B	MDL 02041301	Revision New, dated February 4, 2013	---
142.	Piper Aircraft, Inc.	J3L, J3L-S, J3L-65 (Army L-4C), J3L-65S	A-698	CAR 4a	"	"	"	"	
143.	Piper Aircraft, Inc.	J4, J4A, J4A-S	A-703	CAR 4a	"	"	"	"	
144.	Piper Aircraft, Inc.	J4E (Army L-4E)	A-740	CAR 4a	"	"	"	"	
145.	Piper Aircraft, Inc.	J4F	721	CAR 4a	"	"	"	"	
146.	Piper Aircraft, Inc.	J3C-40, J3C-50, J3C-50S, J3C-65, J3C-65S, PA-11, PA-11S	A-691	CAR 4a	"	"	"	"	
147.	Piper Aircraft, Inc.	PA-15	A-800	CAR 3	"	"	"	"	
148.	Piper Aircraft, Inc.	PA-16, PA-16S	1A1	CAR 3	"	"	"	"	
149.	Piper Aircraft, Inc.	PA-17	A-805	CAR 3	"	"	"	"	
150.	Piper Aircraft, Inc.	PA-18, PA-18S, PA-18 "105" (Special), PA-18S "105" (Special), PA-18A, PA-18 "125" (Army L-21A), PA-18S "125," PA-18AS "125," PA-18 "135" (Army L-21B), PA-18A "135," PA-18S "135," PA-18AS "135," PA-18 "150," PA-18A "150," PA-18S "150," PA-18AS "150," PA-19 (Army L-18C), PA-19S	1A2	CAR 3	"	"	"	"	
151.	Piper Aircraft, Inc.	PA-20, PA-20S, PA-20 "115," PA-20S "115," PA-20 "135," PA-20S "135"	1A4	CAR 3	"	"	"	"	

FEDERAL AVIATION ADMINISTRATION (FAA) APPROVED MODEL LIST (AML) SA02402SE
FOR
INSTALLATION OF ELECTRONICS INTERNATIONAL INC. GLASS PANEL ENGINE MONITOR (WITH IN-FLIGHT DATA) CGR-30C
ISSUE DATE: June 24, 2014

ITEM	AIRCRAFT MAKE	AIRCRAFT MODEL	ORIGINAL TC NUMBER	CERTIFICATION BASIS FOR ALTERATION	FAA APPROVED AIRCRAFT FLIGHT MANUAL SUPPLEMENT		FAA APPROVED MASTER DRAWING LIST		AML REV DATE
					Number	Revision*	Drawing	Revision*	
---	---	---	---	---	AFM1030131	Revision B	MDL 02041301	Revision New, dated February 4, 2013	---
152.	Piper Aircraft, Inc.	PA-22, PA-22-108, PA-22-135, PA-22S-135, PA-22-150, PA-22S-150, PA-22-160, PA-22S-160	1A6	CAR 3	"	"	"	"	
153.	Piper Aircraft, Inc.	PA-23, PA-23-160, PA-23-235, PA-23-250, PA-23-250 (Navy UO-1), PA-E23-250	1A10	CAR 3	"	"	"	"	
154.	Piper Aircraft, Inc.	PA-24, PA-24-250, PA-24-260, PA-24-400	1A15	CAR 3	"	"	"	"	
155.	Piper Aircraft, Inc.	PA-28-140, PA-28-150, PA-28-160, PA-28-180, PA-28-235, PA-28S-160, PA-28S-180, PA-28R-180, PA-28R-200, PA-28-151, PA-28-161, PA-28-181, PA-28R-201, PA-28R-201T, PA-28-236, PA-28RT-201, PA-28RT-201T, PA-28-201T	2A13	CAR 3	"	"	"	"	
156.	Piper Aircraft, Inc.	PA-30, PA-39, PA-40	A1EA	CAR 3	"	"	"	"	
157.	Piper Aircraft, Inc.	PA-31, PA-31-300, PA-31-325, PA-31-350	A20SO	CAR 3	"	"	"	"	
158.	Piper Aircraft, Inc.	PA-31P, PA-31P-350	A8EA	CAR 3	"	"	"	"	
159.	Piper Aircraft, Inc.	PA-32-260, PA-32-300, PA-32S-300, PA-32R-300, PA-32RT-300T, PA-32-301FT, PA-32-301XTC, PA-32R-301 (SP), PA-32R-301 (HP), PA-32R-301T, PA-32-301, PA-32-301T	A3SO	CAR 3	"	"	"	"	
160.	Piper Aircraft, Inc.	PA-34-200, PA-34-200T, PA-34-220T	A7SO	FAR 23	"	"	"	"	

FEDERAL AVIATION ADMINISTRATION (FAA) APPROVED MODEL LIST (AML) SA02402SE
FOR
INSTALLATION OF ELECTRONICS INTERNATIONAL INC. GLASS PANEL ENGINE MONITOR (WITH IN-FLIGHT DATA) CGR-30C
ISSUE DATE: June 24, 2014

ITEM	AIRCRAFT MAKE	AIRCRAFT MODEL	ORIGINAL TC NUMBER	CERTIFICATION BASIS FOR ALTERATION	FAA APPROVED AIRCRAFT FLIGHT MANUAL SUPPLEMENT		FAA APPROVED MASTER DRAWING LIST		AML REV DATE
					Number	Revision*	Drawing	Revision*	
---	---	---	---	---	AFM1030131	Revision B	MDL 02041301	Revision New, dated February 4, 2013	---
161.	Piper Aircraft, Inc.	PA-36-285, PA-36-300, PA-36-375	A9SO	FAR 23	"	"	"	"	
162.	Piper Aircraft, Inc.	PA-36-285, PA-36-300, PA-36-375	A10SO	FAR 23	"	"	"	"	
163.	Piper Aircraft, Inc.	PA-38-112	A18SO	FAR 23	"	"	"	"	
164.	Piper Aircraft, Inc.	PA-44-180, PA-44-180T	A19SO	FAR 23	"	"	"	"	
165.	Piper	PA-46-310P, PA-46-350P, PA-46R-350T	A25SO	FAR 23	"	"	"	"	
166.	Revo, Inc.	Colonial C-1, Colonial C-2, Lake LA-4, Lake LA-4A, Lake LA-4P, Lake LA-4-200, Lake Model 250	1A13	CAR 3	"	"	"	"	
167.	Rogers (Mitchell, Aeronca)	15AC, S15AC	A-802	CAR 3	"	"	"	"	
168.	Ryan Aeronautical Company	SCW-145	658	Aero. Bulletin 7-A	"	"	"	"	
169.	Ryan	ST-3KR (Army PT-22, PT-22A)	A-749	CAR 4a	"	"	"	"	
170.	Sikorsky	S-43, S-43B, S-43W	A-593	Aero. Bulletin 7-A	"	"	"	"	
171.	Socata, S.A. Grumman	GA-7	A17SO	FAR 23	"	"	"	"	
172.	Socata	TB 9, TB 10, TB 20, TB 21, TB 200	A51EU	FAR 21	"	"	"	"	
173.	SOCATA MORANE SAULNIER (Rallye) Series	MS 880B, MS 885, MS 894A, MS 893A, MS 892A-150, MS 892E-150, MS 893E, MS 894E, Rallye 100S, Rallye 150T, Rallye 150ST, Rallye 235E, Rallye 235C	7A14	CAR 3	"	"	"	"	
174.	Stinson	L-5, L-5B, L-5C, L-5D, L-5E, L-5E-1, L-5G	A-764	CAR 4a	"	"	"	"	
175.	Stinson	10A (Army L-9B), 10B	A-738	CAR 4a	"	"	"	"	

FEDERAL AVIATION ADMINISTRATION (FAA) APPROVED MODEL LIST (AML) SA02402SE
FOR
INSTALLATION OF ELECTRONICS INTERNATIONAL INC. GLASS PANEL ENGINE MONITOR (WITH IN-FLIGHT DATA) CGR-30C
ISSUE DATE: June 24, 2014

ITEM	AIRCRAFT MAKE	AIRCRAFT MODEL	ORIGINAL TC NUMBER	CERTIFICATION BASIS FOR ALTERATION	FAA APPROVED AIRCRAFT FLIGHT MANUAL SUPPLEMENT		FAA APPROVED MASTER DRAWING LIST		AML REV DATE
					Number	Revision*	Drawing	Revision*	
---	---	---	---	---	AFM1030131	Revision B	MDL 02041301	Revision New, dated February 4, 2013	---
176.	Stinson	HW-75, 10	A-709	CAR 4a	"	"	"	"	
177.	Stinson	V-77 (Army AT-19)	A-774	CAR 4a	"	"	"	"	
178.	STOL (Republic)	RC-3	A-769	CAR 3	"	"	"	"	
179.	STOL (United Consultants)	(Twin-Bee) UC-1	A6EA	CAR 3	"	"	"	"	
180.	Taylorcraft	A	A-643	Aero. Bulletin 7-A	"	"	"	"	
181.	Taylorcraft	(Army L-2G) BF, BFS, BF-60, BFS-60, BF-65, BFS-65, (Army L-2K) BF12-65	A-699	CAR 4a	"	"	"	"	
182.	Taylorcraft	BL, BLS, (Army L-2F) BL-65, BLS-65, (Army L-2J) BL12-65, BLS12-65	A-700	CAR 4a	"	"	"	"	
183.	Taylorcraft 2000, LLC	19, F19, F21, F21A, F21B, F22, F22A, F22B, F22C	1A9	CAR 3	"	"	"	"	
184.	Taylorcraft 2000, LLC	BC, BCS, BC-65, BCS-65, BC12-65 (Army L-2H), BCS12-65, BC12-D, BCS12-D, BC12-D1, BCS12-D1, BC12D-85, BCS12D-85, BC12D-4-85, BCS12D-4-85	A-696	CAR 4	"	"	"	"	
185.	Thrush Aircraft, Inc. (Snow, Rockwell, Ayres)	600 S-2D, S2-R, S2R-R3S, S2R-R1340	A3SW	CAR 3	"	"	"	"	
186.	Thrush Aircraft, Inc. (Snow, Rockwell, Ayres)	600 S2D, S2R, S2R-R3S, S2R-R1340, S2R-R1820	A4SW	CAR 8.10(a)(1)	"	"	"	"	
187.	Thrush Aircraft, Inc. (Snow, Rockwell, Ayres)	S2A	2A9	CAR 8.10(a)(1)	"	"	"	"	
188.	Thrush Aircraft, Inc. (Snow, Rockwell, Ayres)	S-2B, S-2C, 600-S2C	2A7	CAR 8.10(a)(1)	"	"	"	"	
189.	TKEF	Model 44	A2WI	FAR 23	"	"	"	"	

FEDERAL AVIATION ADMINISTRATION (FAA) APPROVED MODEL LIST (AML) SA02402SE
FOR
INSTALLATION OF ELECTRONICS INTERNATIONAL INC. GLASS PANEL ENGINE MONITOR (WITH IN-FLIGHT DATA) CGR-30C
ISSUE DATE: June 24, 2014

ITEM	AIRCRAFT MAKE	AIRCRAFT MODEL	ORIGINAL TC NUMBER	CERTIFICATION BASIS FOR ALTERATION	FAA APPROVED AIRCRAFT FLIGHT MANUAL SUPPLEMENT		FAA APPROVED MASTER DRAWING LIST		AML REV DATE
					Number	Revision*	Drawing	Revision*	
---	---	---	---	---	AFM1030131	Revision B	MDL 02041301	Revision New, dated February 4, 2013	---
190.	True Flight Holdings LLC (American General)	AA-1, AA-1A, AA-1B, AA-1C	A11EA	FAR 23	"	"	"	"	
191.	True Flight Holdings LLC (American General)	AA-5, AA-5A, AA-5B, AG-5B	A16EA	FAR 23	"	"	"	"	
192.	Twin Commander	500, 500-A, 500-B, 500-U, 520, 560, 560-A, 560-E, 500-S	6A1	CAR 3	"	"	"	"	
193.	Twin Commander	560-F, 680, 680E, 720, 680FL, 680FL(P), 685	2A4	CAR 3	"	"	"	"	
194.	Twin Commander	700	A12SW	FAR 23	"	"	"	"	
195.	Univair (Stinson)	108, 108-1, 108-2, 108-3, 108-5	A-767	CAR 3	"	"	"	"	
196.	Univair (Mooney)	(ERCO) 415-C, (ERCO) 415-CD	A-718	CAR 4a	"	"	"	"	
197.	Univair	(ERCO) 415-D, (ERCO) E, (ERCO) G, (Forney) F-1, (Forney) F-1A, (Alon) A-2, (Alon) A2-A, (Mooney) M-10	A-787	CAR 3	"	"	"	"	
198.	Varga (Morrissey)	2150, 2150A, 2180	4A19	CAR 3	"	"	"	"	
199.	Viking Air Limited	DHC-2 Mk. I, DHC-2 Mk. II	A-806	FAR 21	"	"	"	"	
200.	Viking Air Limited (Otter)	DHC-3	A-815	CAR 10	"	"	"	"	
201.	Vulcanair S.p.A.	P.68, P.68B, P.68C, P.68C-TC, P.68 "Observer," P.68TC "Observer," P.68 "Observer 2," P.68R	A31EU	FAR 23	"	"	"	"	
202.	WACO	2T-1A, 2T-1A-1, 2T-1A-2	A18EA	Aero. Bulletin 7-A	"	"	"	"	

FEDERAL AVIATION ADMINISTRATION (FAA) APPROVED MODEL LIST (AML) SA02402SE
FOR
INSTALLATION OF ELECTRONICS INTERNATIONAL INC. GLASS PANEL ENGINE MONITOR (WITH IN-FLIGHT DATA) CGR-30C
ISSUE DATE: June 24, 2014

ITEM	AIRCRAFT MAKE	AIRCRAFT MODEL	ORIGINAL TC NUMBER	CERTIFICATION BASIS FOR ALTERATION	FAA APPROVED AIRCRAFT FLIGHT MANUAL SUPPLEMENT		FAA APPROVED MASTER DRAWING LIST		AML REV DATE
					Number	Revision*	Drawing	Revision*	
---	---	---	---	---	AFM1030131	Revision B	MDL 02041301	Revision New, dated February 4, 2013	---
203.	Weatherley	201, 201A, 201B, 201C	A10WE	FAR 21.25	"	"	"	"	
204.	Weatherley	620, 620A, 620B	A26WE	FAR 21.25	"	"	"	"	
205.	Zenair	CH2000	TA5CH	FAR 21	"	"	"	"	
206.	Zlin Aircraft a.s.	ZLIN 526L	A30EU	FAR 21	"	"	"	"	
207.	Zlin Aircraft a.s.	Z-242L, Z-143L	A76EU	FAR 23	"	"	"	"	

* Or later FAA Approved Revision

FAA Approved:


 Manager, Seattle Aircraft
 Certification Office

**AMENDED:
 REISSUED:**

Blank Page

Providing Superior Products and
Unparalleled Customer Service Since 1979

